


Lift and Support Points

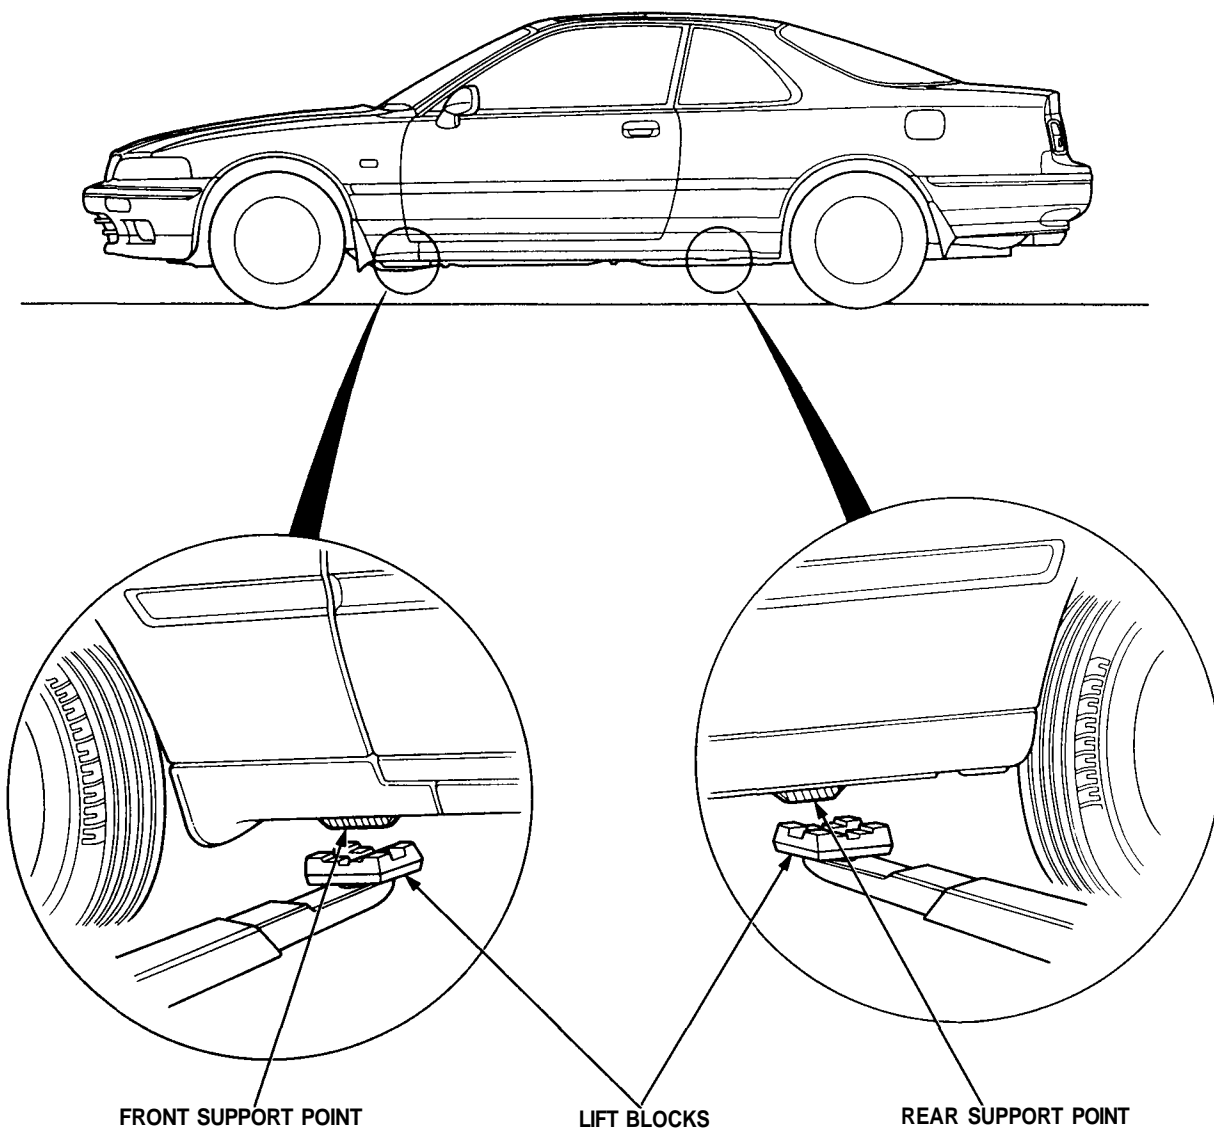

Lift

1. Place the lift blocks as shown.
2. Raise the lift until the tires are slightly off the ground and rock the car to be sure it is firmly supported.
3. Raise the lift to full height and inspect lift points for solid support.



Lift and Support Points


Floor Jack

1. Set the parking brake and block the wheels that are not being lifted.
2. When lifting the rear of the car, put the gearshift lever in reverse (Automatic in **P** position).
3. Raise the car high enough to insert the safety stands.
4. Adjust and place the safety stands as shown on page 1-11 so the car will be approximately level, then lower the car onto them.


⚠ WARNING

- Always use safety stands when working on or under any vehicle that is supported by only a jack.
- Never attempt to use a bumper jack for lifting or supporting the car.

Front

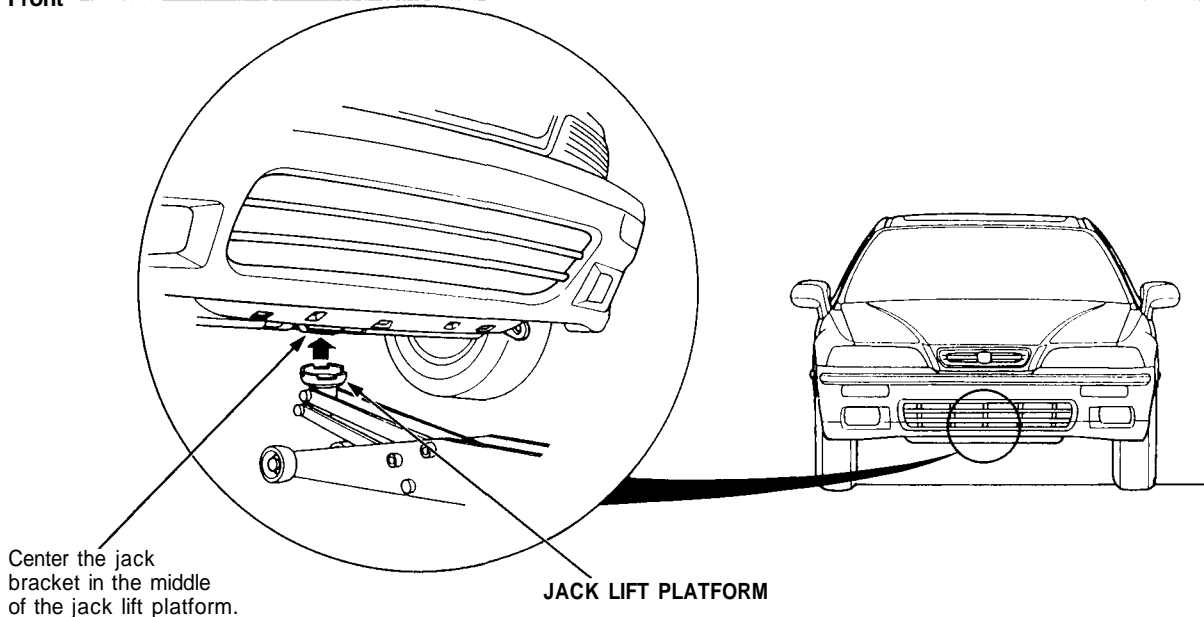

Rear

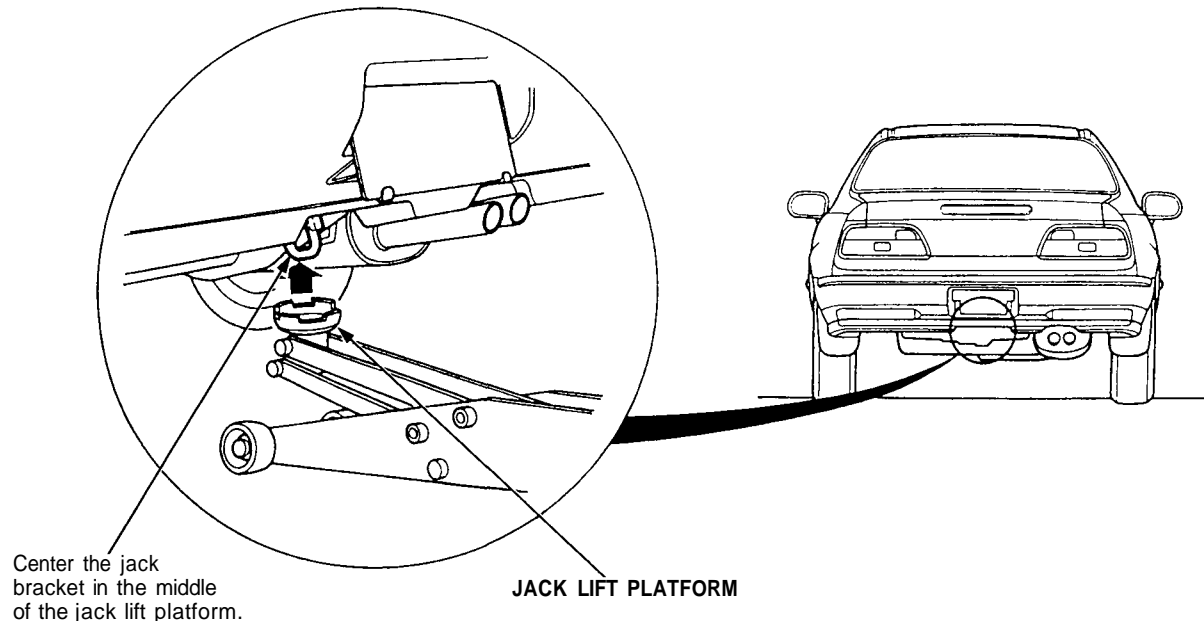



Safety Stands

