

R — Replace I — Inspect; After inspection, clean, adjust, repair or replace if necessary.

Service at the interval listed x 1,000 miles (or km) or after that number of months, whichever comes first.																	NOTE	SEC and PAGE
Maintenance item	x 1,000 miles	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105			
	x 1,000 km	12	24	36	48	60	72	84	96	108	120	132	144	156	168			
	months	6	12	18	24	30	36	42	48	54	60	66	72	78	84			
Engine and Transmission																		
<input type="checkbox"/> Air cleaner element					R				R					R				11-127
Idle speed									I ¹								Manual transmission: 680 ± 50 rpm Automatic transmission: 630 ± 50 rpm (N) or (P) position)	11-103
Positive crankcase ventilation valve									I								If clicking sound is heard as you pinch the hose between the PCV valve and intake manifold, valve is OK.	11-151
Fuel filter									R ¹								The rubber fuel hoses need periodic replacement since they are subject to cracks and deterioration during a long period of use.	11-118
Fuel pipes, hoses, and connections						I ¹			I ¹					I ¹			Check fuel lines for loose connections, cracks and deteriorations. Retighten loose connections and replace any damaged parts.	11-5
Spark plugs									R ²								NGK: PZFR6F-11 NIPPONDENSO: PKJ20CR-L11	23-106
<input checked="" type="checkbox"/> Engine oil		R	R	R	R	R	R	R	R	R	R	R	R	R	R		Capacity for change with filter: 4.5 ℓ (4.7 US qt, 4.0 Imp qt)	8-4
<input checked="" type="checkbox"/> Engine oil filter		R	R	R	R	R	R	R	R	R	R	R	R	R	R			8-5
Alternator drive belt					I				I					I			9.5–11.5 mm (0.37–0.45 in) with 100 N (10 kg, 22 lbs) tension	23-126
Cooling system hoses and connections					I ¹				I ¹					I ¹				10-2, 3
• Engine coolant							R				R				R ³		Capacity for change: Manual transmission: 7.7 ℓ (8.1 US qt, 6.8 Imp qt) Automatic transmission: 7.6 ℓ (8.0 US qt, 6.7 Imp qt) Check specific gravity for freezing point	10-5
Timing belt														R ⁴				6-30, 34
Water pump														I				10-9
Three way catalytic converter heat shield									I								Check condition and tightness.	11-143
Exhaust pipe (before catalytic converter)					I ¹				I ¹					I ¹			Check condition and tightness.	9-4
Exhaust pipe and muffler (after catalytic converter)			I		I		I		I		I			I		I	Check condition and tightness.	9-4
<input type="checkbox"/> Manual transmission oil					R				R					R			2.3 ℓ (2.4 US qt, 2.0 Imp qt) for change	13-4
<input type="checkbox"/> Automatic transmission fluid					R				R					R			3.3 ℓ (3.5 US qt, 2.9 Imp qt) for change HONDA Premium Formula ATF or DEXRON® II ATF	14-85
<input type="checkbox"/> Front differential oil					R				R					R			1.05 ℓ (1.11 US qt, 0.92 Imp qt) for change Hypoid gear oil classified GL4 or GL5	15-4

• : Check oil and coolant level at each fuel stop.

☐ : Under severe driving conditions, service these items more often.

¹: The cars sold in California, this service is recommended only; other areas, it is required.

²: Replace every 6 years or 60,000 miles (96,000 km), whichever comes first.

³: Thereafter, replace every 2 years or 30,000 miles (48,000 km), whichever comes first.

⁴: This service is recommended only.

R—Replace I—Inspect; After inspection, clean, adjust, repair or replace if necessary.

Maintenance item	Service at the interval listed x 1,000 miles (or km) or after that number of months, whichever comes first.															NOTE	SEC and PAGE
	x 1,000 miles	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105		
	x 1,000 km	12	24	36	48	60	72	84	96	108	120	132	144	156	168		
Maintenance item	months	6	12	18	24	30	36	42	48	54	60	66	72	78	84		
Brakes																	
Front brake pads	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	Min. thickness: 1.6 mm (0.06 in)	19-7
<input type="checkbox"/> Front brake discs and calipers		I			I				I				I		I	Min. thickness: 21 mm (0.83 in)	19-11
<input type="checkbox"/> Rear brake discs, calipers and pads		I			I				I				I		I	Min. thickness: Discs 7.5 mm (0.30 in) : Pads 1.6 mm (0.06 in)	19-28 19-18
Parking brake drums and linings					I				I				I			Min. thickness: Drums 171 mm (6.73 in) : Linings 1.0 mm (0.04 in)	19-22
Brake hoses and lines			I		I				I				I		I	Check for leaks, damage, interference or twisting.	19-29
Parking brake			I		I				I				I			Fully engaged: 8 to 12 clicks.	19-4
Brake fluid (including Anti-lock brake system)					R				R				R			Use only DOT3 or DOT4 fluid. Check that brake fluid level is between the upper and lower marks on the reservoir.	19-11
Anti-lock brake system operation					I				I				I			Function test Wheel sensor signal confirmation Anti-lock brake system indicator light.	19-47 19-49 19-50
Anti-lock brake system high pressure hose									R							Bleed high pressure fluid.	19-77
Steering, suspension, miscellaneous																	
Front wheel alignment			I		I				I				I		I		18-4
Steering operation, tie rod ends, steering gearbox and boots			I		I				I				I			Check rack grease and steering linkage. Check the boot for damage or leaking grease.	17-65
<input type="checkbox"/> Power steering system		I			I				I				I		I		17-3
Power steering pump belt					I				I				I			11.5—13.5 mm (0.45—0.53 in) with 100 N (10 kg, 22 lbs) tension	17-17
Suspension mounting bolts			I		I				I				I		I	Check tightness of bolts.	18-8, 20
Air conditioning filter		R			R				R				R		R		21-60
Supplemental Restraint System		Inspect system 10 years after production															—

☐: Under severe driving conditions, service these items more often.

Severe Driving Conditions

Items marked **R** or **I** in the chart indicate you will need some services more frequently in certain severe driving conditions.

The conditions are:

- A. Driving less than 5 miles (8 km) per trip, or, in freezing temperatures, driving less than 10 miles (16 km) per trip.
- B. Driving on rough or muddy roads, or de-iced roads.
- C. Driving in extremely dusty conditions.
- D. Extensive idling or driving long periods at slow speeds, such as a delivery vehicle.
- E. Towing a trailer.

Services for Severe Driving Conditions

- Clean the air cleaner element every 15,000 miles (24,000 km) or 12 months and replace every 30,000 miles (48,000 km) or 24 months under condition B or C.
- Replace engine oil and oil filter every 3,750 miles (6,000 km) or 3 months under condition A, B, C, D or E.
- Replace transmission oil every 15,000 miles (24,000 km) or 12 months under condition D or E.
- Replace front differential oil every 15,000 miles (24,000 km) or 12 months under condition D or E.
- Inspect front brake discs and calipers, and rear brake discs, calipers and pads every 7,500 miles (12,000 km) or 6 months under condition B, C, D or E.
- Inspect the power steering system every 7,500 miles (12,000 km) or 6 months under condition A, B or C.

