




Illustrated Index

CAUTION: To avoid damaging the cylinder head, wait until the engine coolant temperature drops below 100 F (38 C) before removing it.

NOTE:

- Use new O-rings and gaskets when reassembling.
- Replace rubber seals if damaged or deteriorated.

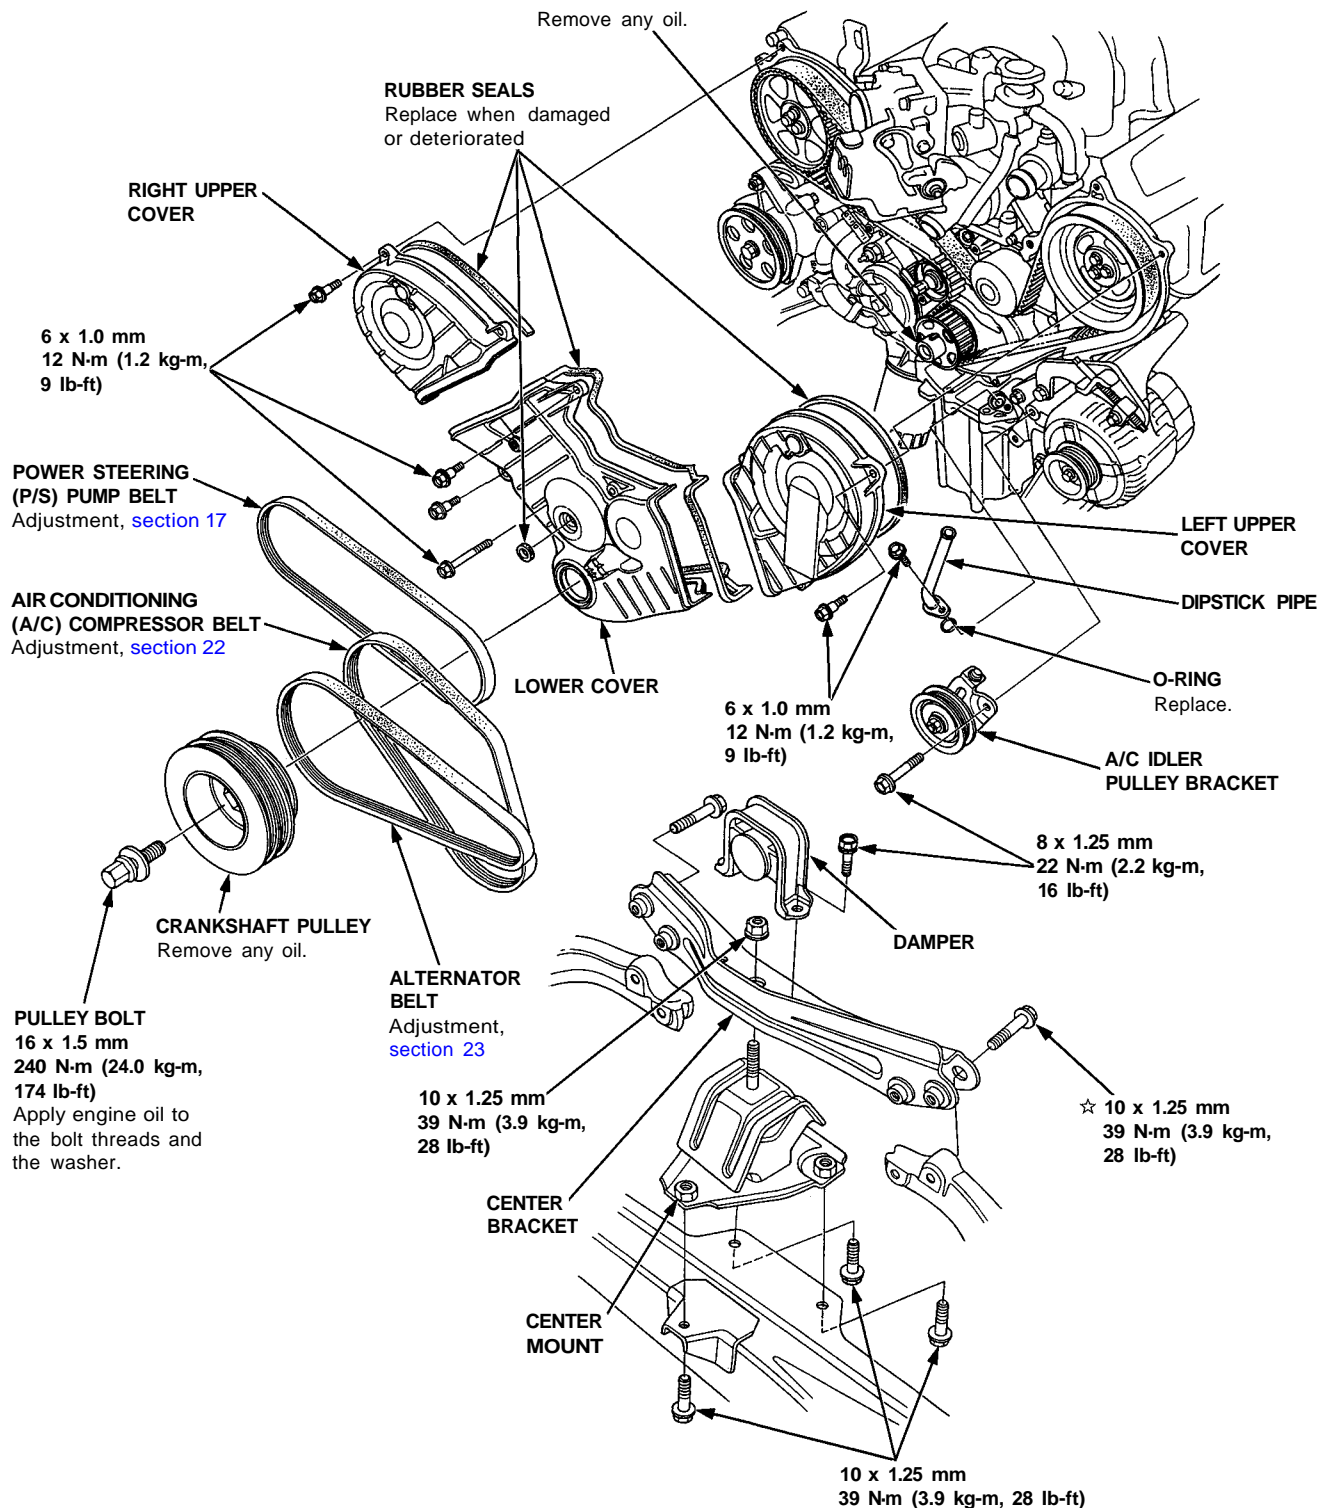

☆: CORROSION RESISTANT BOLT


(cont'd)

Illustrated Index

(cont'd)

NOTE:

- Use new O-rings and gaskets when reassembling.
- Replace rubber seals if damaged or deteriorated.

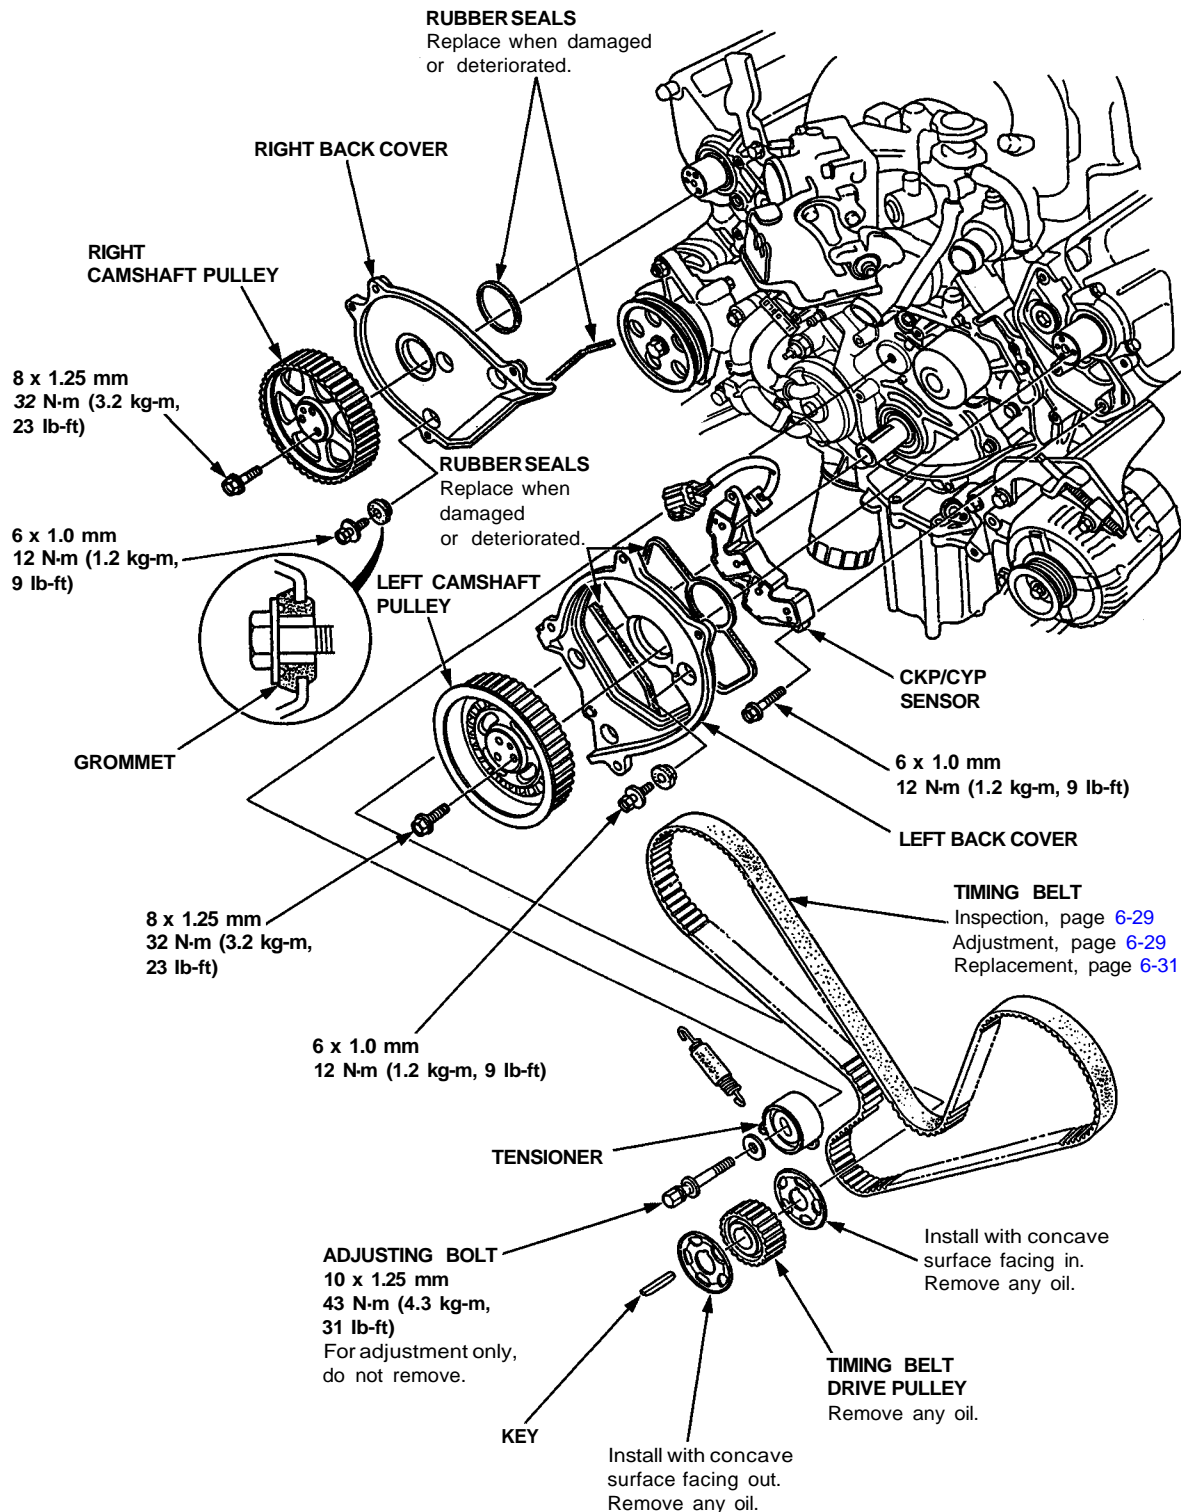


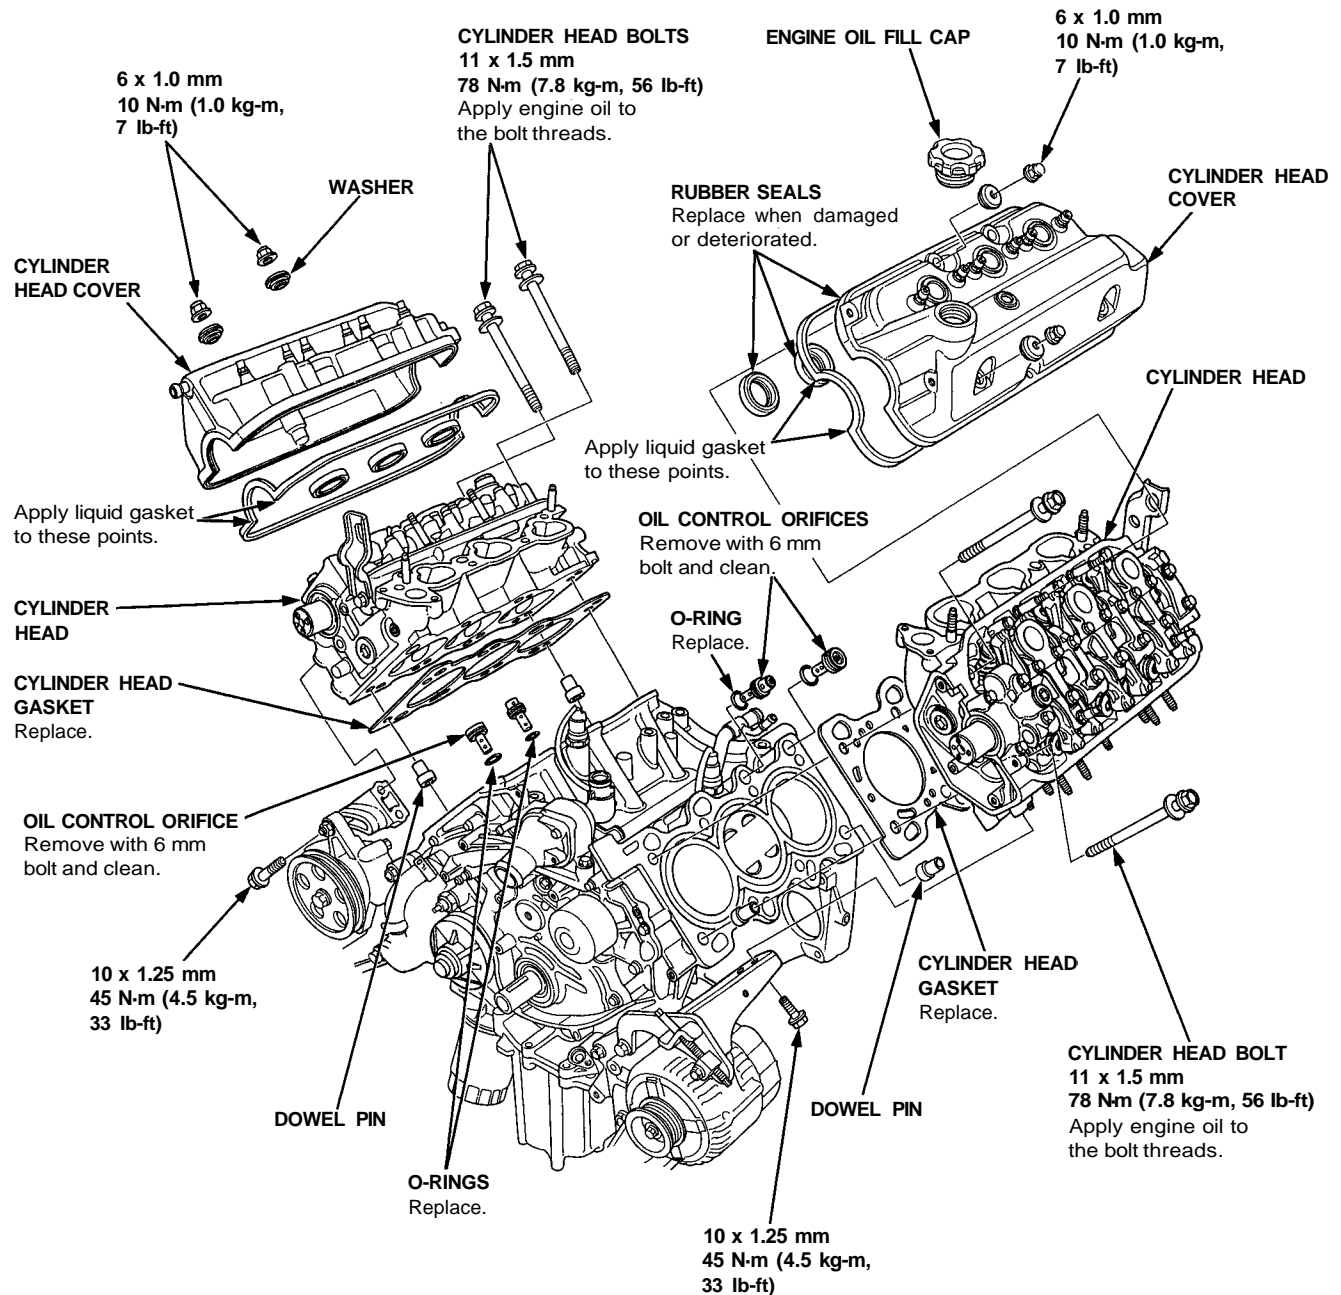


CAUTION: To avoid damaging the cylinder head, wait until the engine coolant temperature drops below 100°F (38°C) before removing it.

NOTE:

- Use new O-rings and gaskets when reassembling.
- Use liquid gasket, Part No. 08718-0001.

 Prior to reassembling, clean all the parts in solvent, dry them, and apply lubricant to any contact parts.




(cont'd)

Illustrated Index

(cont'd)

NOTE:

- Use new O-rings and gaskets when reassembling.
- Use liquid gasket, Part No. 08718-0001.

 Prior to reassembling, clean all the parts in solvent, dry them, and apply lubricant to any contact parts.

