




Valves, Valve Springs and Valve Seals

Installation Sequence

NOTE: Exhaust and intake valve seals are NOT interchangeable.

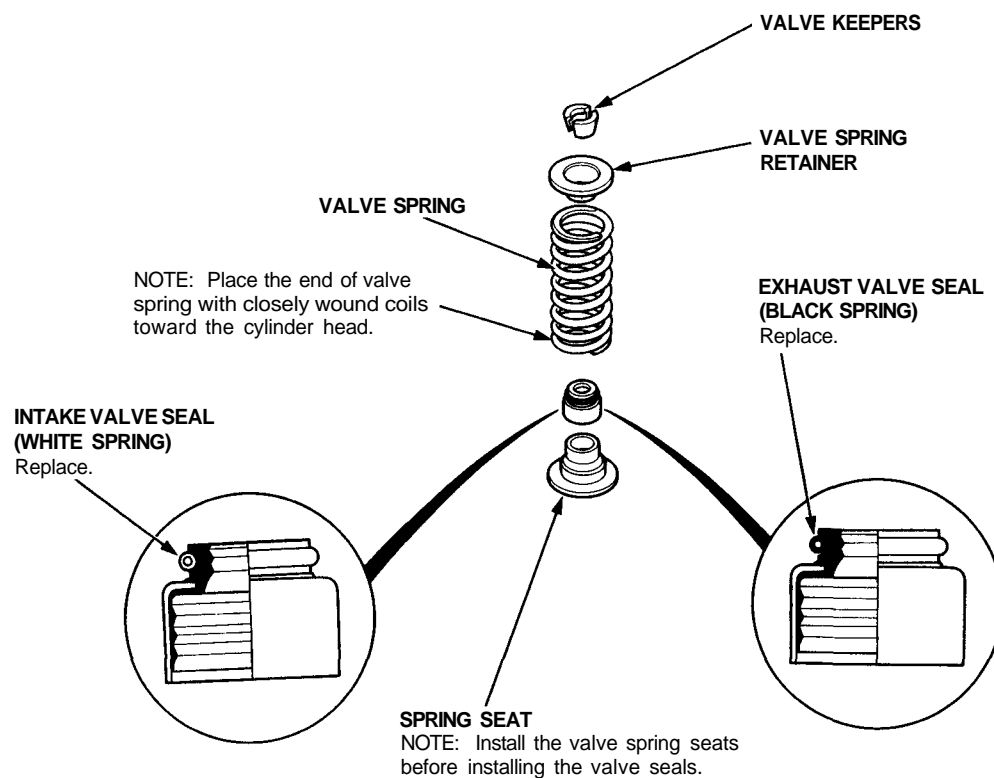

VALVE GUIDE SEAL INSTALLER
COMMERCIALY AVAILABLE
KD - 2899 or EQUIVALENT

NOTE: Use the end
of the tool with the
smallest I.D.

