


Timing Belt

Illustrated Index

NOTE:

- Turn the crankshaft so that the No. 1 piston is at TDC (page 6-34).
- Replace rubber seals if damaged or deteriorated.
- Remove the damper, the center bracket and the center mount before removing the crankshaft pulley.

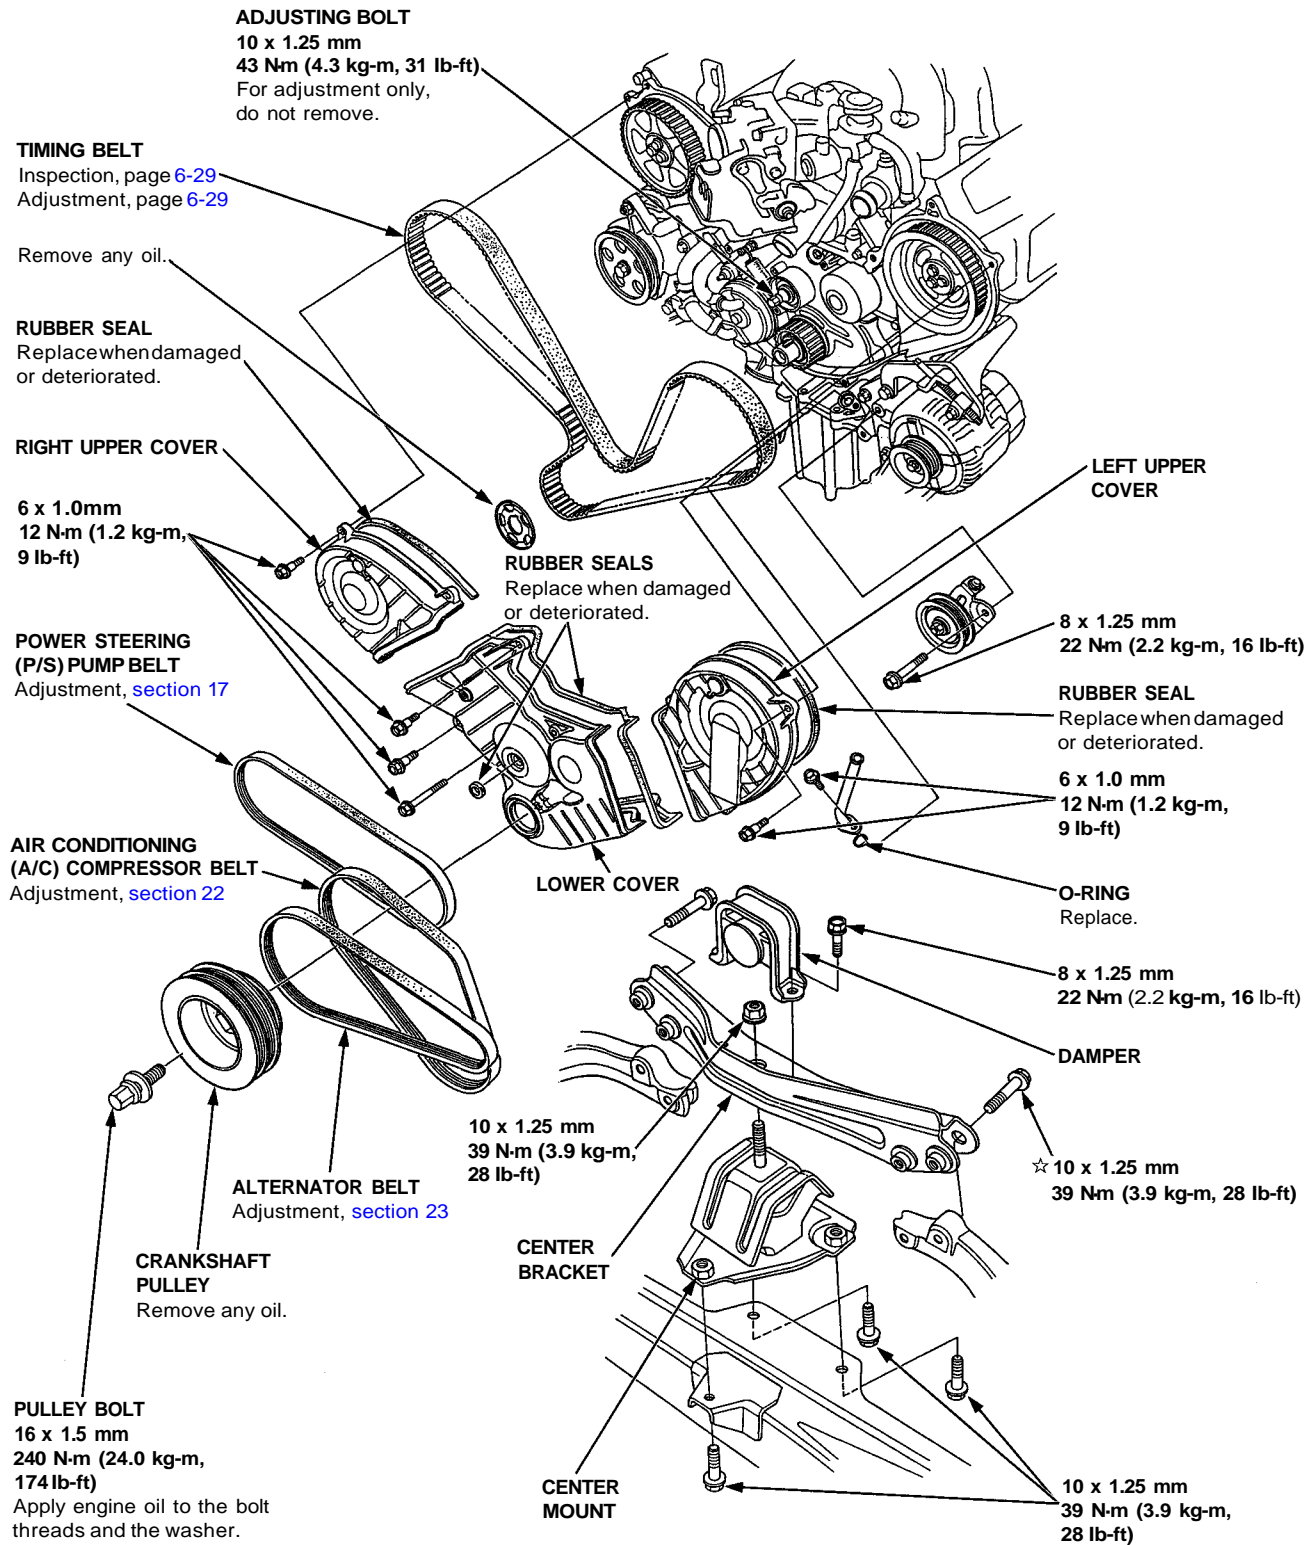

☆: CORROSION RESISTANT BOLT