

CKP/CYP Sensor

Replacement

1. Remove the damper from the center bracket (see page 6-29).
2. Turn the crankshaft so that the No. 1 piston is at top dead center (see page 6-34).
3. Remove the upper covers.
4. Remove the timing belt from the right and left camshaft pulleys (see page 6-11).
5. Remove the left camshaft pulley.
6. Remove the left back cover.
7. Remove the CKP/CYP sensor from the left cylinder head.
8. Install the CKP/CYP sensor in the reverse order of removal;
 - Refer to page 6-34 when installing the timing belt.

