

Oil Pump

Illustrated Index

NOTE:

- Use new O-rings when reassembling.
- Apply oil to O-rings before installation.
- Make the marking dent on the inner and outer rotors face to the oil pump cover when the rotors are attached to the oil pump housing.

