

Idle Control System

Troubleshooting Flowchart — Automatic Transaxle (A/T) Gear Position Signal -

This signals the PCM when the transmission is in **N** or **P** position.



