

Fuel Supply System

Fuel Tank

Replacement

⚠ WARNING Do not smoke while working on fuel system. Keep open flame away from your work area.

1. Relieve the fuel pressure (see page 11-106).
2. Block front wheels. Jack up the rear of the car and support with jackstands.
3. Remove the drain bolt and drain the fuel into an approved container.
4. Disconnect the connectors from the fuel gauge sending unit and the fuel pump.
5. Remove the fuel hose protector.
6. Disconnect the hoses.

CAUTION:

- When disconnecting the hoses, slide back the clamps, then twist hoses as you pull to avoid damaging them.
- Clean the flared joints of high pressure hoses thoroughly before reconnecting them.

7. Place a jack, or other support, under the tank.
8. Remove the strap bolts and nuts, and let the straps fall free.
9. Remove the fuel tank.

NOTE: The tank may stick on the undercoat applied to its mount. To remove, carefully pry it off the mount.

10. Install a new washer on the drain bolt, then install parts in the reverse order of removal.

