




## Throttle Body (cont'd)

### Disassembly

with TCS: Remove the TCS control valve (see page [19-154](#)).

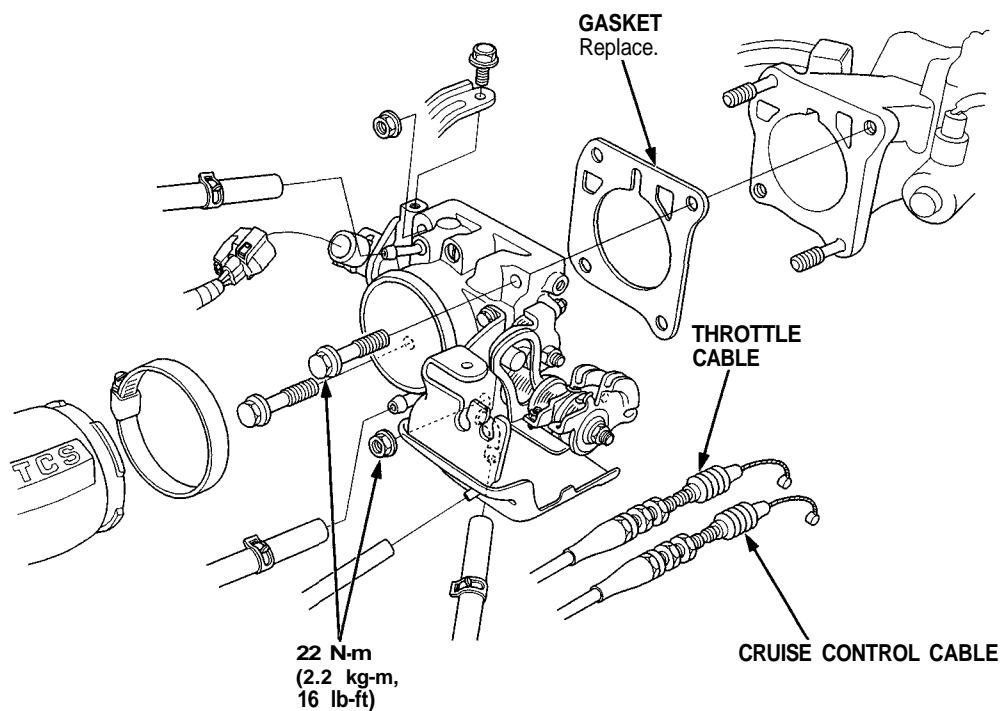

### CAUTION:

- The throttle stop screw is non-adjustable.
- After reassembly, adjust the throttle cable (see page [11-128](#)) and the cruise control cable (see [section 23](#)).

