


Clutch Master Cylinder

Removal

CAUTION:

- Do not spill brake fluid on the car; it may damage the paint; if brake fluid does contact the paint, wash it off immediately with water.
- Plug the end of the clutch pipe and reservoir hose with a shop towel to prevent fluid from flowing out of the clutch pipe and reservoir hose after disconnecting.


- Disconnect the clutch pipe from the clutch master cylinder.
- Pry out the cotter pin, and pull the clutch pedal pin out of the yoke.

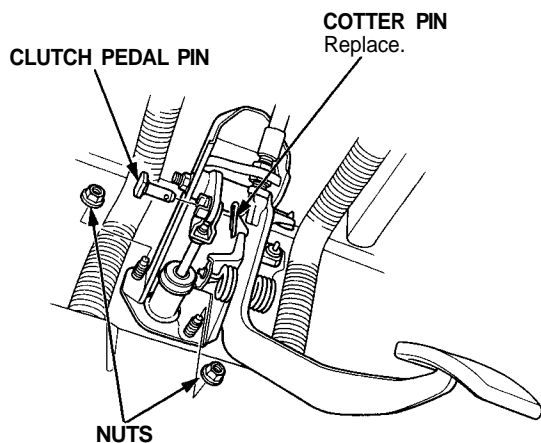

- Remove the evaporative emission control canister.

NOTE: Do not disconnect the hoses.

- Remove the nuts and bolts, then remove the clutch master cylinder with the reservoir from the engine compartment.

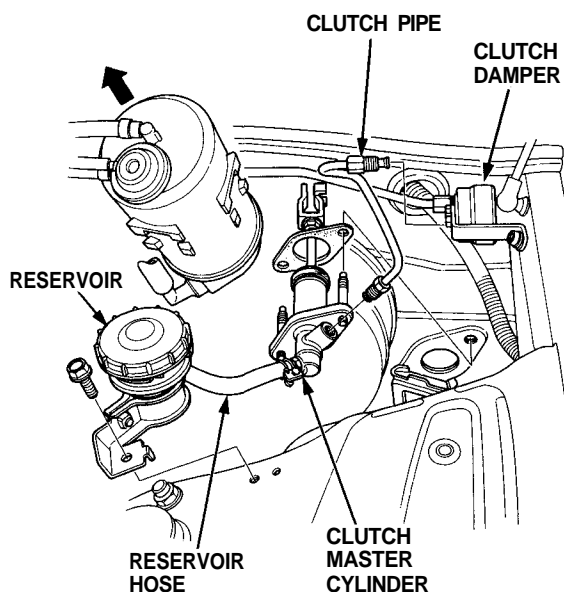

Installation

Install the clutch master cylinder in the reverse order of removal.

NOTE: Bleed the clutch hydraulic system (see page 12-7).

