
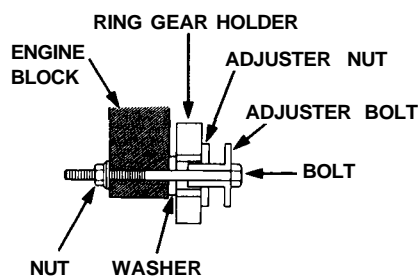



Pressure Plate, Clutch Disc

Removal

1. Install the special tools as shown.

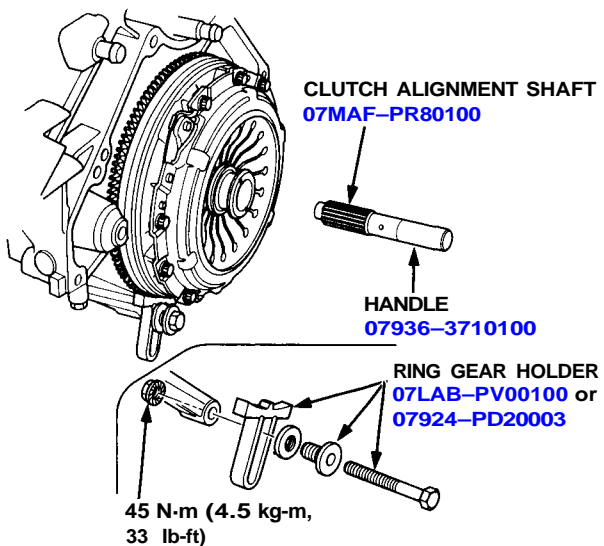

2. To prevent warping, unscrew the pressure plate mounting bolts two turns at a time in a crisscross pattern, then remove the pressure plate.
3. Remove the release bearing from the pressure plate.

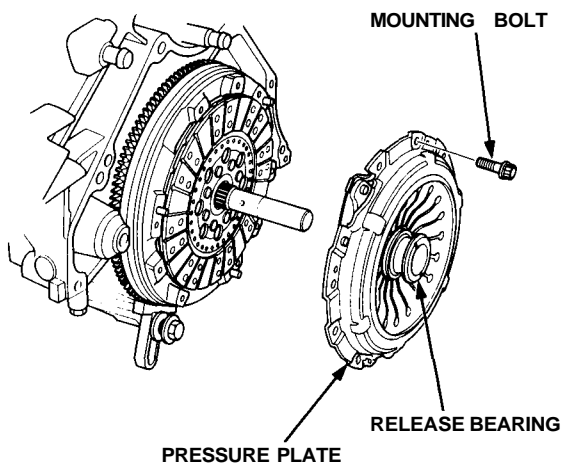

4. Remove the clutch disc and special tools.

