



# Back-up Light Switch, Neutral Position Switch


## Replacement

NOTE: To check the switch see [section 23](#).


1. Remove the release fork cover and the slave cylinder.

NOTE:


- Do not disconnect the clutch pipe from the slave cylinder.
- Take care not to bend the clutch pipe.

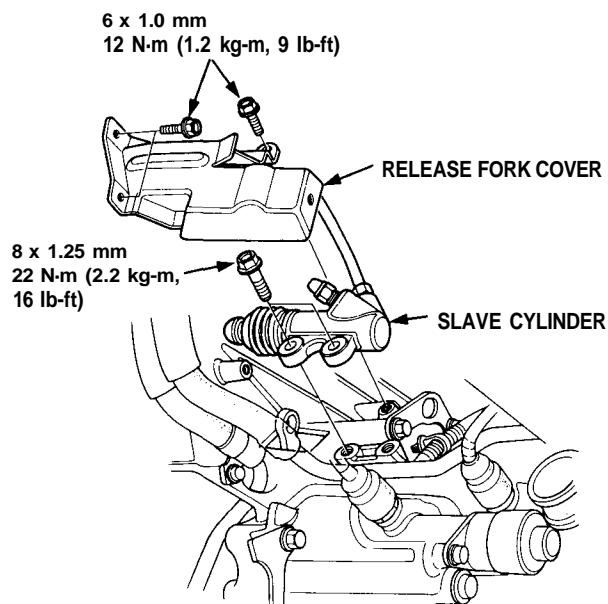


2. Disconnect the connector, then remove the switch connector from the connector clamp.
3. Remove the neutral position switch.

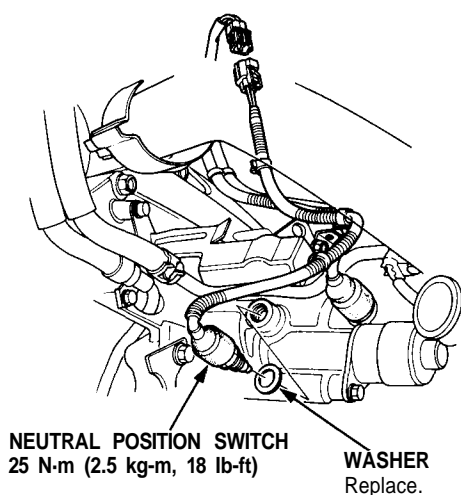

4. Loosen the back-up light switch using a crowfoot wrench as shown.

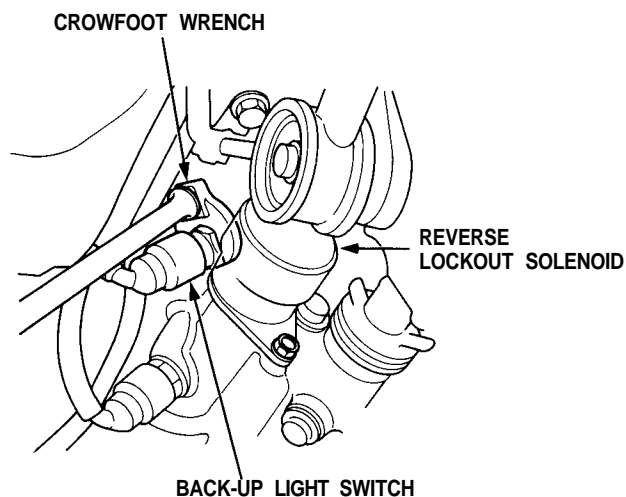

5. Remove the back-up light switch.

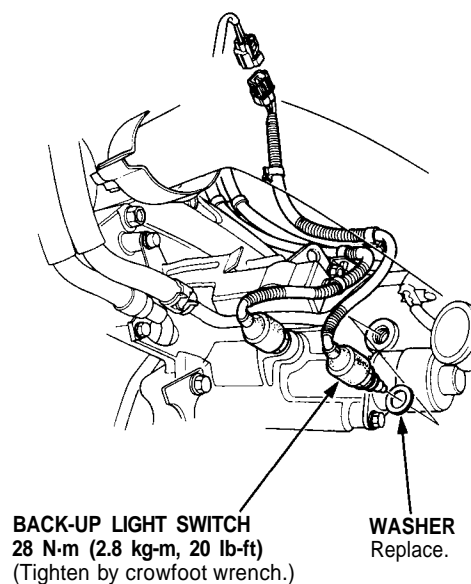

6. Install the new washer and switch in the reverse order of removal.