




3. If the resistance is not within the standard, disconnect the 3-P connector from the reverse lockout solenoid.
4. Measure the resistance between terminals A and B in the reverse lockout solenoid.

STANDARD: 9.0—13.6 Ω

If the resistance is within the standard, replace the reverse lockout solenoid sub-harness.


If the resistance is not within the standard, replace the reverse lockout solenoid.

5. Test reverse lockout solenoid operation by connecting battery power to the A terminal and ground to the B terminal. A clicking sound should be heard.
6. If the reverse lockout solenoid no clicking sound is heard, replace it.

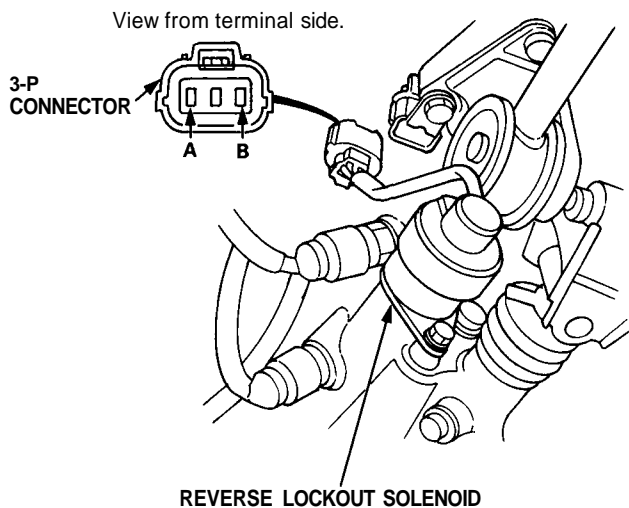


Replacement

1. Disconnect the change extension and change rod.
2. Remove the extension stay.
3. Disconnect the connector.

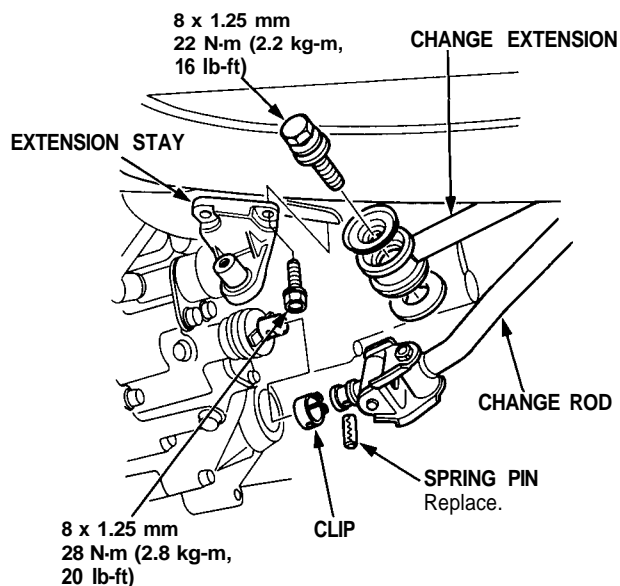

4. Remove the reverse lockout solenoid from the transmission.
5. Remove the select lock pin and select lock return spring.

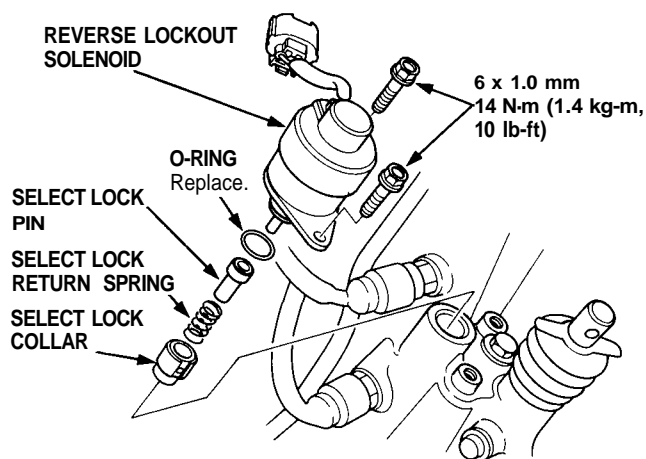

6. Install the reverse lockout solenoid in the reverse order of removal.