

Transmission Cover

Removal

NOTE: Replace all sealing washers.

1. Remove the transmission cover following the numbered sequence.

NOTE: Loosen the bolts ⑱ in a crisscross pattern in several steps.

