



5th/6th Gear

Removal

1. Remove 5th/6th gear following the numbered sequence.

NOTE: Countershaft locknut has left-hand threads.

