


Mainshaft, Countershaft, Reverse Gear Shaft

Disassembly


1. Disassemble the mainshaft, countershaft and the reverse gear shaft assemblies following the numbered sequence.

NOTE: Always replace the spring pins when removed.

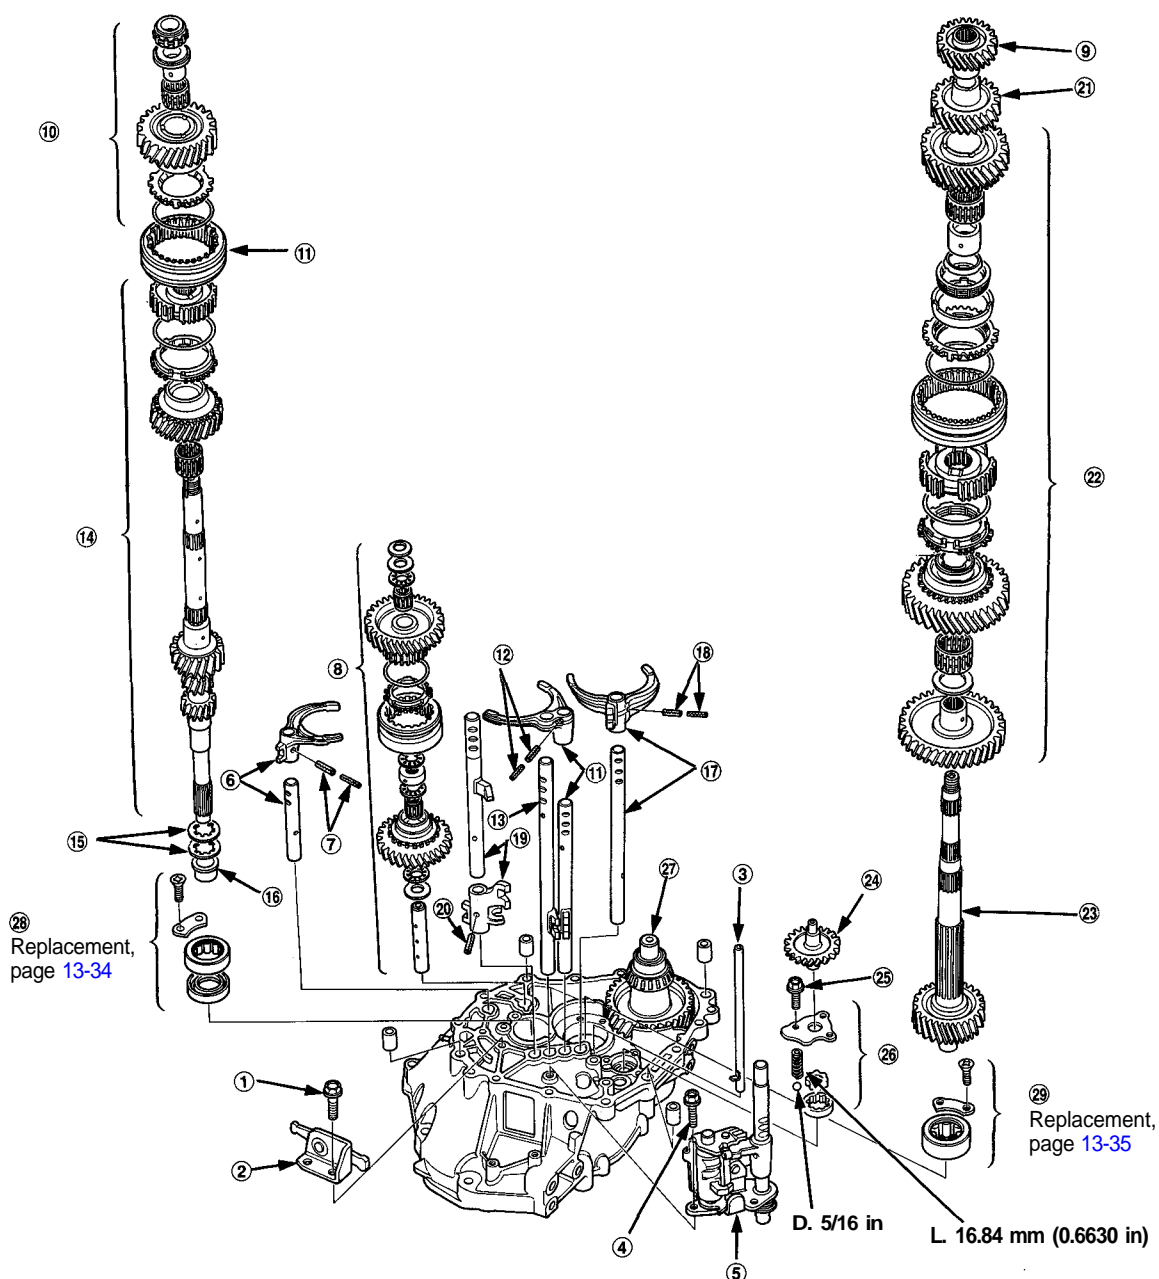



-1. Remove the spring pins from the shift fork shaft.

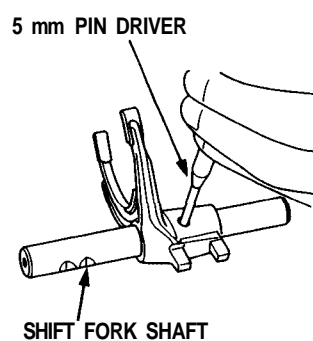

-2. Remove 3rd gear using a press as shown.

