



# Mainshaft Oil Seal (Clutch Housing)

## Replacement

1. Remove the release bearing guide.

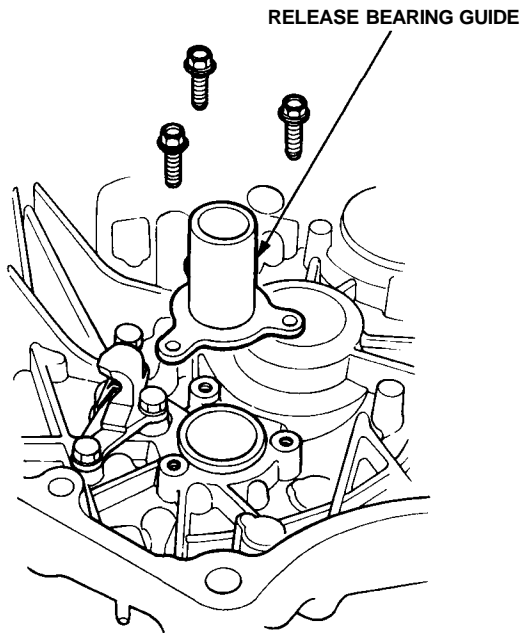


2. Remove the oil seal.

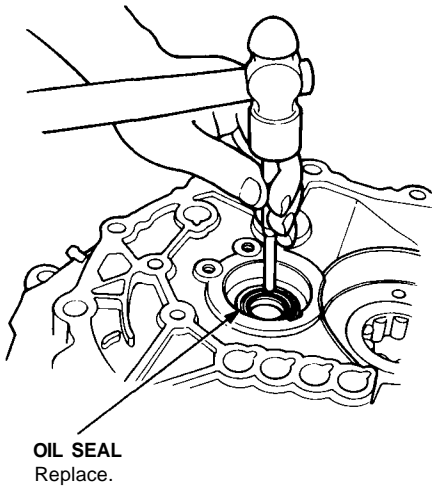

3. Drive a new oil seal from the transmission side using the special tools as shown.

NOTE: After installing, measure the clearance between the transmission housing surface end and the oil seal.

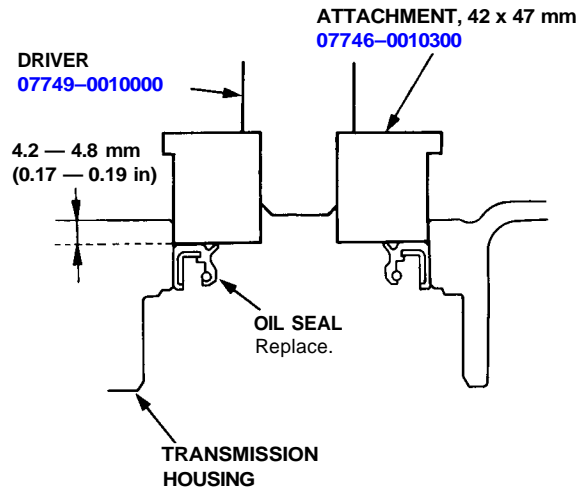

4. Install the release bearing guide.

