

Secondary Gear Assembly

Index

NOTE: If the parts marked * are replaced, the bearing preload must be adjusted (see page 13-46).

