


Extension Shaft

Removal

1. Remove the set ring, then remove the extension shaft from the secondary gear.

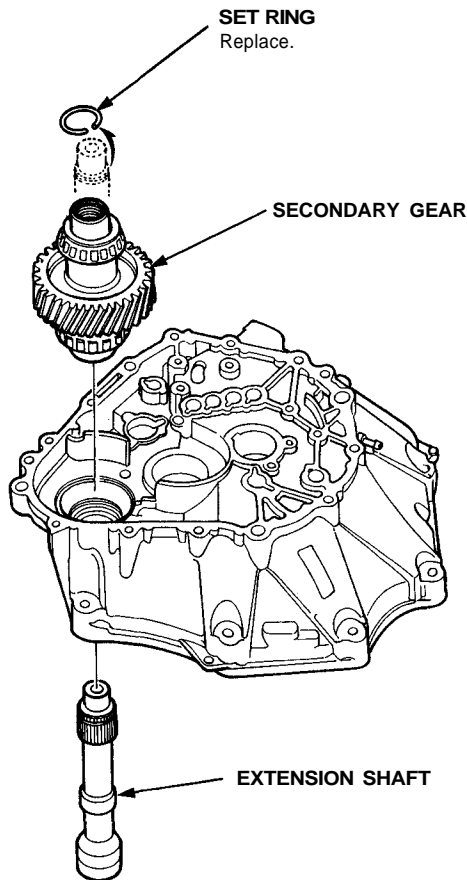


Oil Seal (Secondary Gear)



Replacement

1. Remove the oil seal.

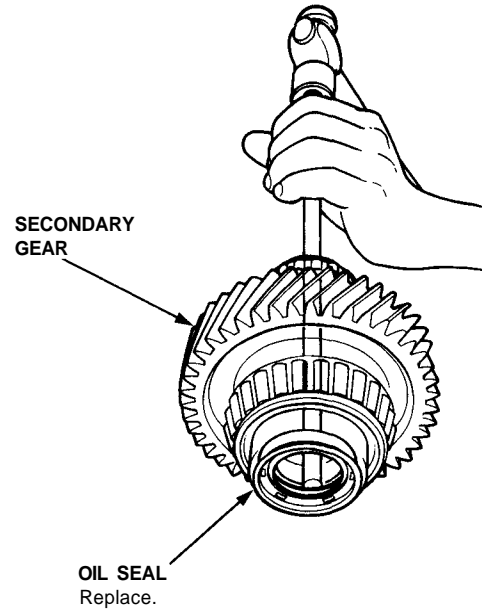

2. Install the oil seal in the secondary gear using the special tools as shown.

NOTE: After installing, measure the clearance between the secondary gear end and the oil seal.

