


Oil Seal

Installation

Transmission Housing Side:

1. Install the oil seal using the special tools as shown.

NOTE: After installing, measure the clearance between the transmission housing end and the oil seal.

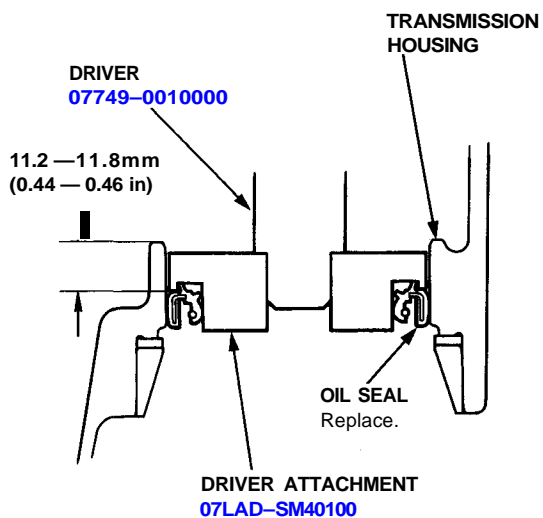

Clutch Housing Side:

1. Install the oil seal using the special tools as shown.

ATTACHMENT, 72 x 75 mm

07746-0010600

DRIVER

07749-0010000

