

Electrical Troubleshooting

Troubleshooting Flowchart (cont'd)

Self-diagnosis **D4** indicator light blinks three times.

Turn the ignition switch ON.

Check whether the Malfunction Indicator Lamp (MIL) blinks (see [section 11](#)).

Is the MIL blinking?

YES
Repair the PGM-FI System (see [section 11](#)).

NO
Check for loose PCM connectors. If necessary, substitute a known-good PCM and recheck.

Possible Cause
<ul style="list-style-type: none">• Disconnected throttle position (TP) sensor connector• Short or open in TP sensor wire• Faulty TP sensor