

Electrical Troubleshooting

Troubleshooting Flowchart (cont'd)

Self-diagnosis **D4** indicator light blinks eleven times.


Possible Cause

- Trouble in PCM

Disconnect No. 15: ACG(s) fuse (7.5 A) in the under-dash fuse/relay box for 10 seconds to reset the PCM.

Drive the car for several miles so that the transmission upshifts and down-shifts several times.

UNDER-DASH
FUSE/RELAY BOX

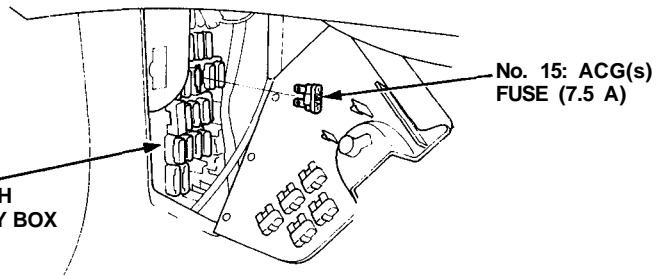

Does self-diagnosis **D4** indicator light blink eleven times?

NO

Intermittent failure, system is OK at this time.

YES

Replace the PCM.