



Self-diagnosis **D4** indicator light blinks fourteen times.

Disconnect No. 15 ACG(s) fuse (7.5 A) in the under-dash fuse/relay box for 10 seconds to reset the PCM.

Drive the car for several miles so that the transmission upshifts and down-shifts several times.

Does self-diagnosis **D4** indicator light blink fourteen times?

NO


Intermittent failure, system is OK at this time.

YES

Replace the PCM.

Possible Cause

- Trouble in PCM

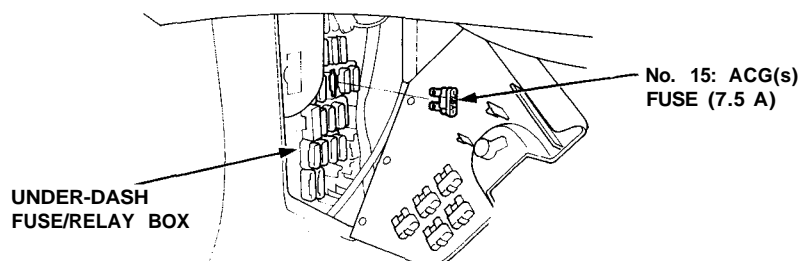

(cont'd)