



D4 indicator light is on steady, not blinking whenever the ignition switch is turned ON.

Turn the ignition switch OFF.

Disconnect the E (26P) connector from the PCM.
Connect the Test Harness "A" connector to the wire harness only, not to the PCM (page 14-48 and 49).

Turn the ignition switch ON.

Measure the voltage between the A20 terminal and body ground.

Is there voltage?

YES

Replace the PCM.

NO

Connect the Test Harness "A" connector to the PCM.

Measure the voltage between the YEL/RED wire at the gauge assembly and body ground (see section 23).

Is there voltage?


NO

Replace faulty A/T gear position indicator.

YES

Repair short to power source on YEL/RED wire between the E20 terminal and gauge assembly.

NOTE: The section A of the Test Harness with the Test Harness Adapter corresponds to the E (26 P) connector of the PCM.

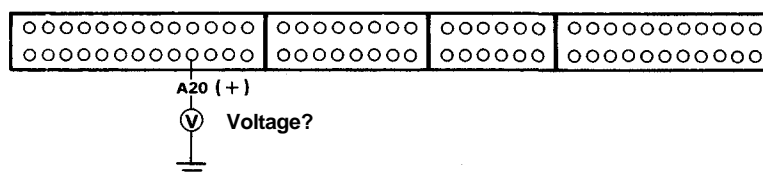

(cont'd)