




Replacement

1. Remove the mounting bolts and lock-up control solenoid valve assembly.

NOTE: Be sure to remove or replace the lock-up control solenoid valves A and B as an assembly.

2. Check the lock-up control solenoid valve oil passages for dust or dirt, and replace as an assembly, if necessary.

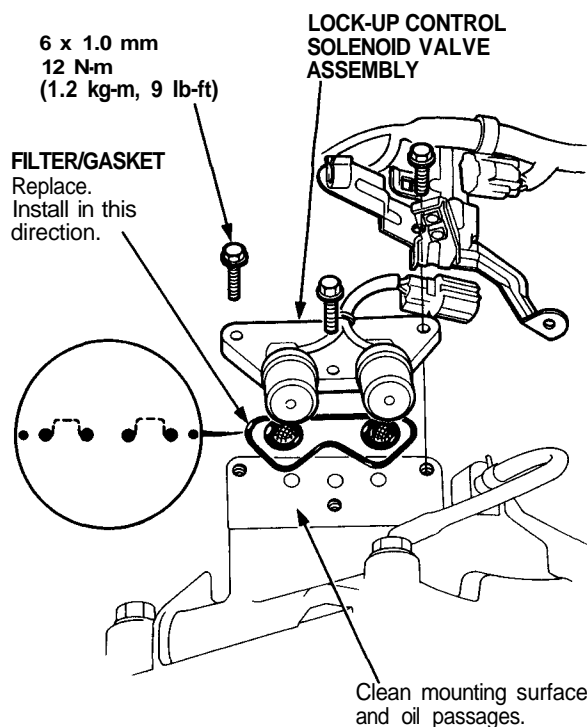

3. Clean the mounting surface and oil passages of the lock-up control solenoid valve assembly and install a new filter/gasket.

NOTE: Install the filter/gasket in the direction shown.

4. Check connector for rust, dirt or oil and reconnect it securely.