


Kick-down Switch


Replacement

1. Remove the 6 mm bolts.
2. Disconnect the connector.
3. Replace the kick-down switch.

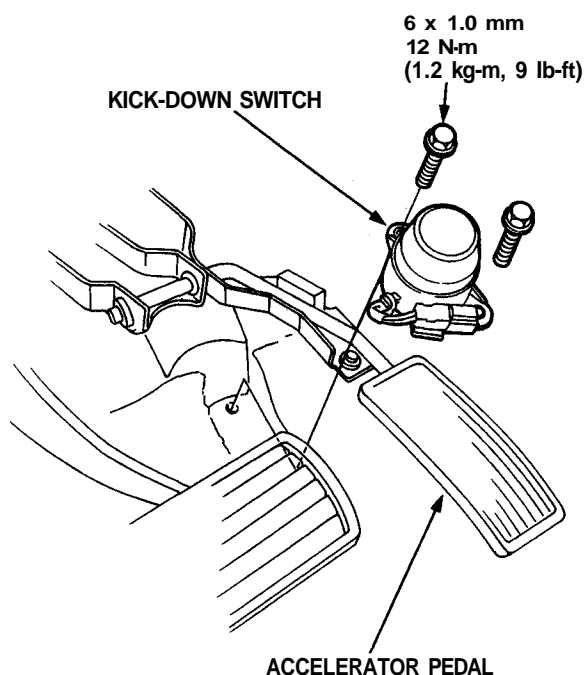


Adjustment

1. Loosen the locknut.

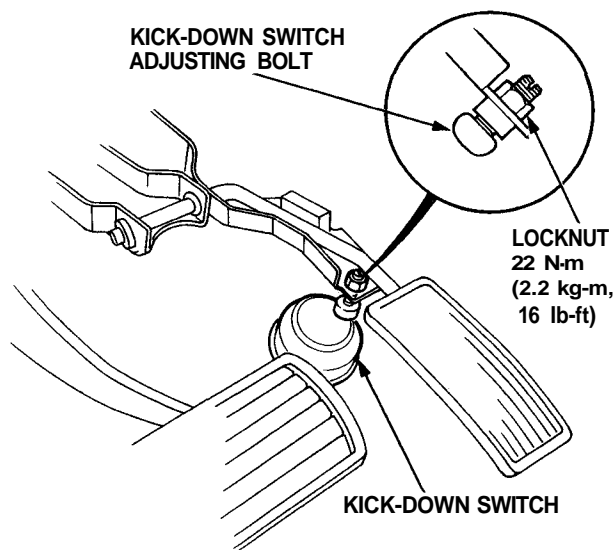

2. Adjust the length of the kick-down switch adjusting bolt so that the accelerator pedal travelling distance between the point where the bolt first contacts with the kick-down switch and the point where the accelerator pedal hits the stopper becomes the specified value.

STANDARD: 11–17 mm (0.43–0.70 in)

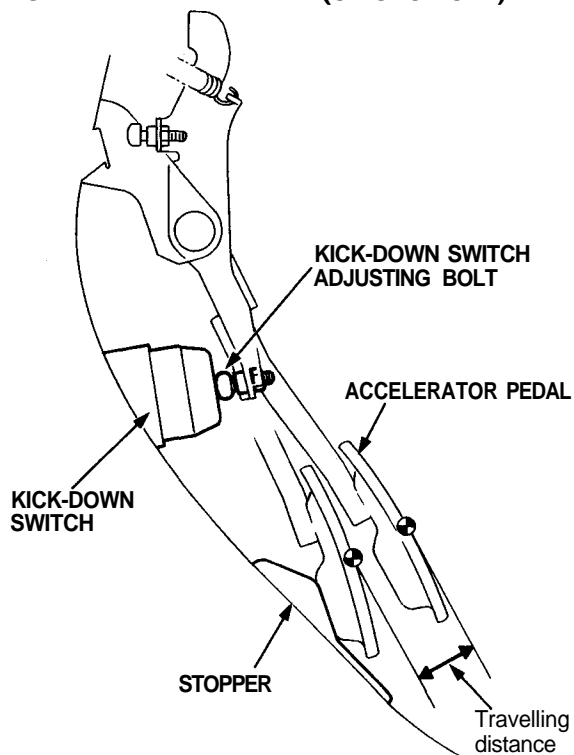

3. Tighten the locknut.