

# Lower Valve Body Assembly

## Removal/Installation

1. Remove the drain plug, and drain automatic transmission fluid (ATF). Reinstall the drain plug with a new washer.
2. Remove the shift cable cover and remove the control lever from the control shaft.
3. Remove the shift control solenoid valve/linear solenoid harness connector stopper.
4. Disconnect the shift control solenoid valve/linear solenoid connector from the transmission sub-harness connector.
5. Remove the oil pan and oil pan gasket.
6. Remove three bolts and the ATF strainer.
7. Remove six bolts and the lower valve body assembly.
8. Install the lower valve body assembly in the reverse order of removal.

