


Illustrated Index

Housing/Lower Valve Body

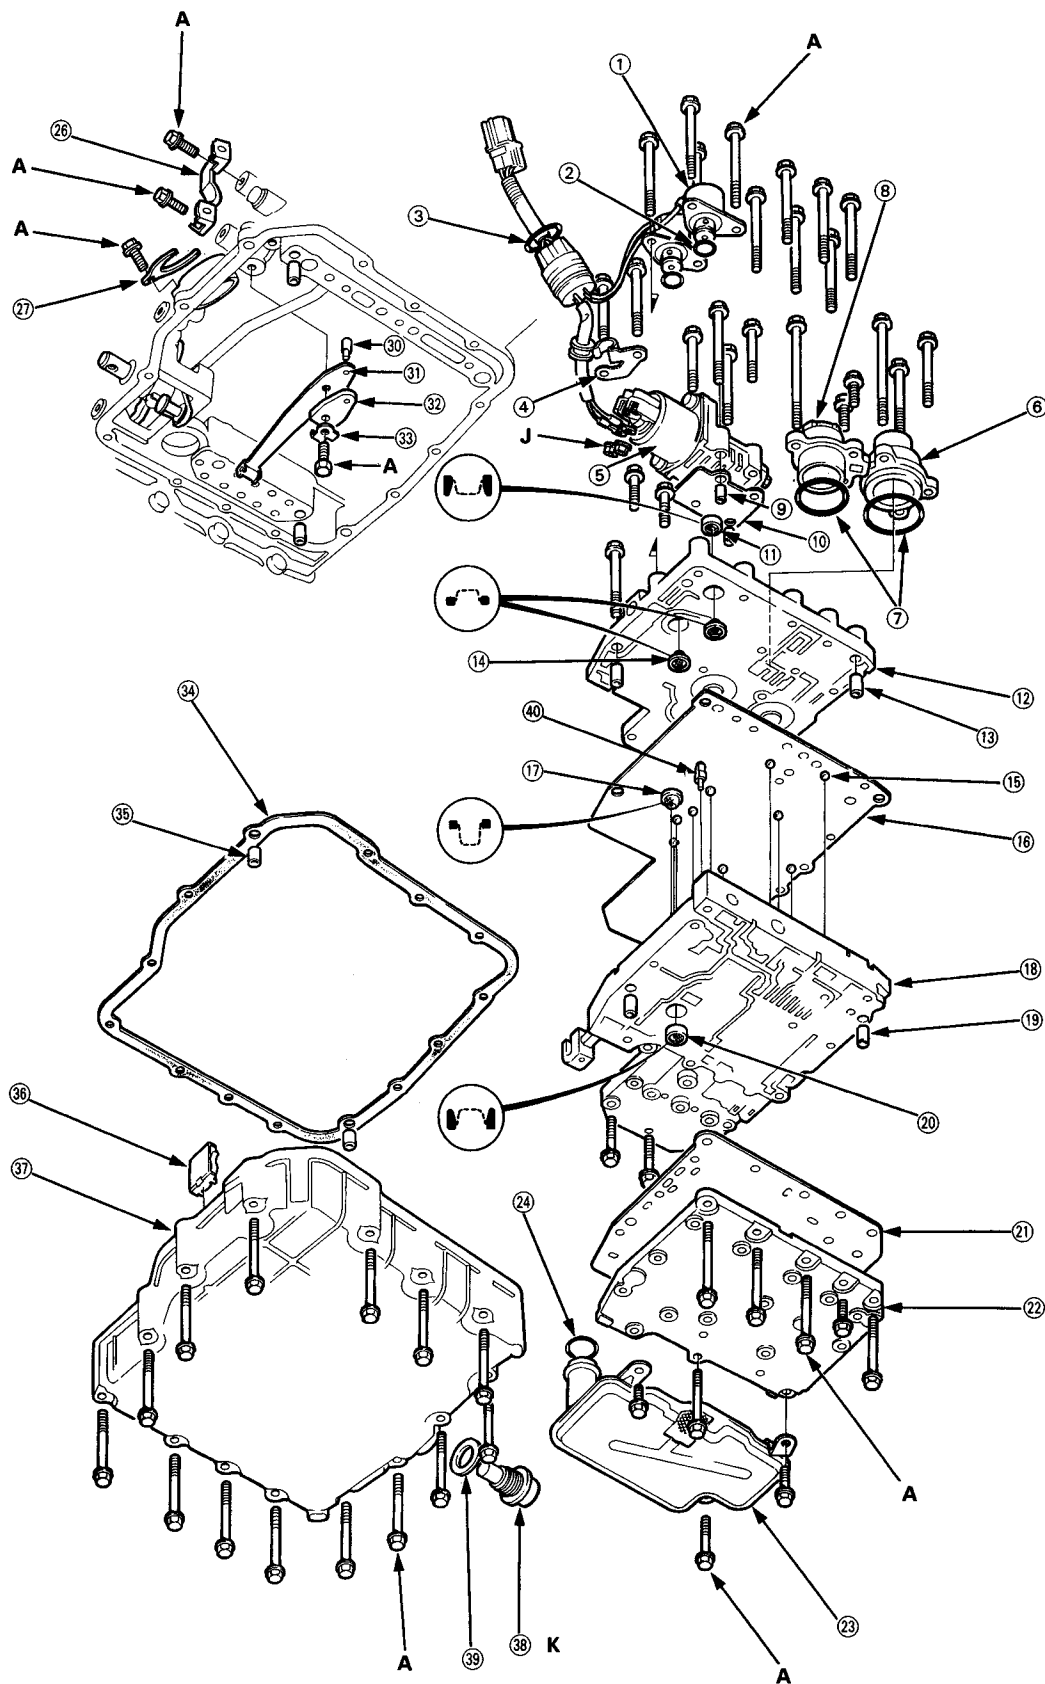



- ① SHIFT CONTROL SOLENOID VALVE A/B
- ② O-RING Replace.
- ③ O-RING Replace.
- ④ HARNESS CLAMP
- ⑤ LINEAR SOLENOID/THROTTLE VALVE BODY
- ⑥ 2ND ACCUMULATOR COVER
- ⑦ O-RINGS Replace.
- ⑧ 1ST ACCUMULATOR COVER
- ⑨ DOWEL PIN
- ⑩ THROTTLE SEPARATOR PLATE
- ⑪ FILTER Replace.
- ⑫ SECONDARY VALVE BODY
- ⑬ DOWEL PIN
- ⑭ FILTER Replace.
- ⑮ CHECK BALLS
- ⑯ MAIN SEPARATOR PLATE
- ⑰ FILTER Replace.
- ⑱ MAIN VALVE BODY
- ⑲ DOWEL PIN
- ⑳ FILTER Replace.
- ㉑ OIL PASS BODY SEPARATOR PLATE
- ㉒ OIL PASS BODY
- ㉓ ATF STRAINER
- ㉔ O-RING Replace.
- ㉕ SHIFT CABLE HOLDER BASE
- ㉖ CONNECTOR STOPPER
- ㉗ DETENT SPRING FIX PIN
- ㉘ DETENT SPRING
- ㉙ DETENT SPRING PLATE
- ㉚ LOCK WASHER Replace.
- ㉛ OIL PAN GASKET Replace.
- ㉜ DOWEL PIN
- ㉝ ATF MAGNET
- ㉞ OIL PAN
- ㉟ DRAIN PLUG
- ㊱ SEALING WASHER Replace.
- ㊲ CHOKE

TORQUE SPECIFICATIONS

No.	Torque Value	Bolt Size	Remarks
A	12 N·m (1.2 kg-m, 9 lb-ft)	6 x 1.0 mm	
J	6 N·m (0.6 kg-m, 4 lb-ft)	5 x 0.8 mm	Flange Nut
K	50 N·m (5.0 kg-m, 36 lb-ft)	18 x 1.5 mm	Drain Plug