



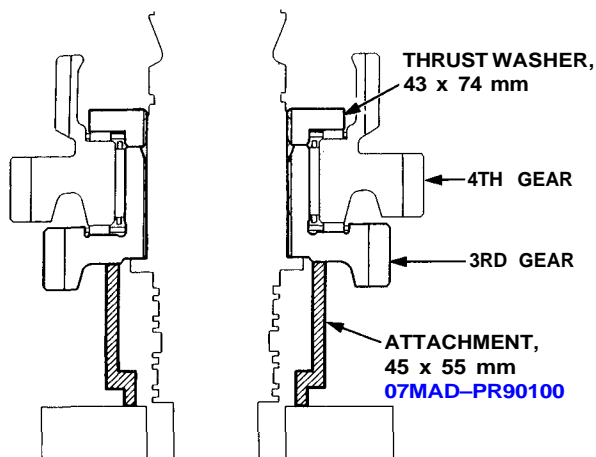

## Disassembly

1. Remove mainshaft 3rd gear, 4th gear and thrust washer, 43 x 74 mm from the mainshaft using the special tool and a press as shown.


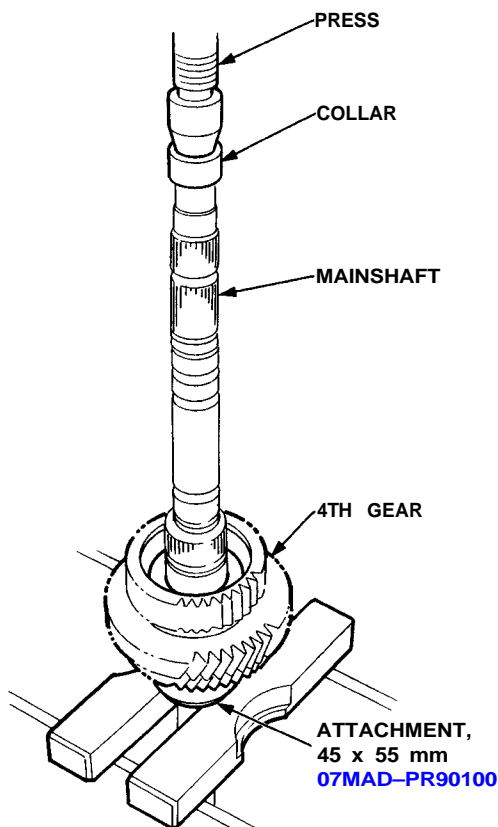


## Inspection

### NOTE:

- Inspect and adjust the thrust washer, 43 x 74 mm when disassembling the mainshaft assembly or replacing mainshaft 3rd gear and/or 1st/4th clutch assembly.
- Lubricate all parts with ATF during assembly.

1. Install mainshaft 3rd gear on the mainshaft using the special tool and a press as shown.

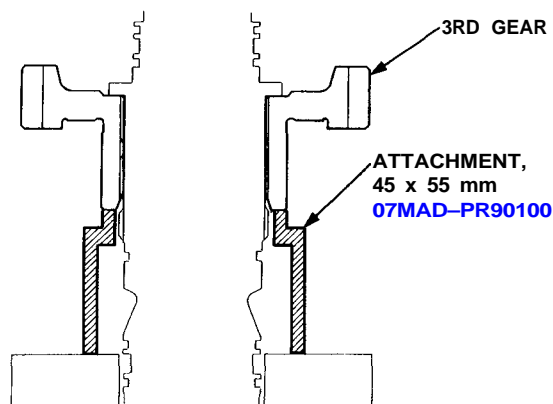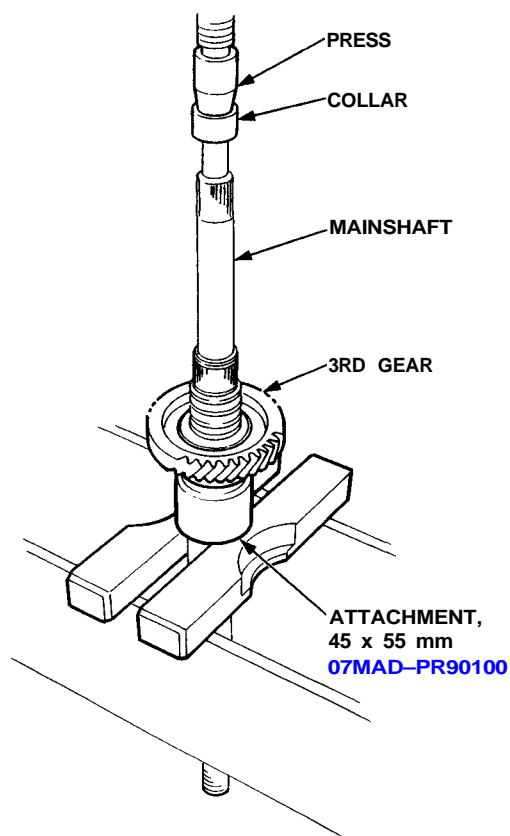

(cont'd)