



Extension Shaft

Disassembly

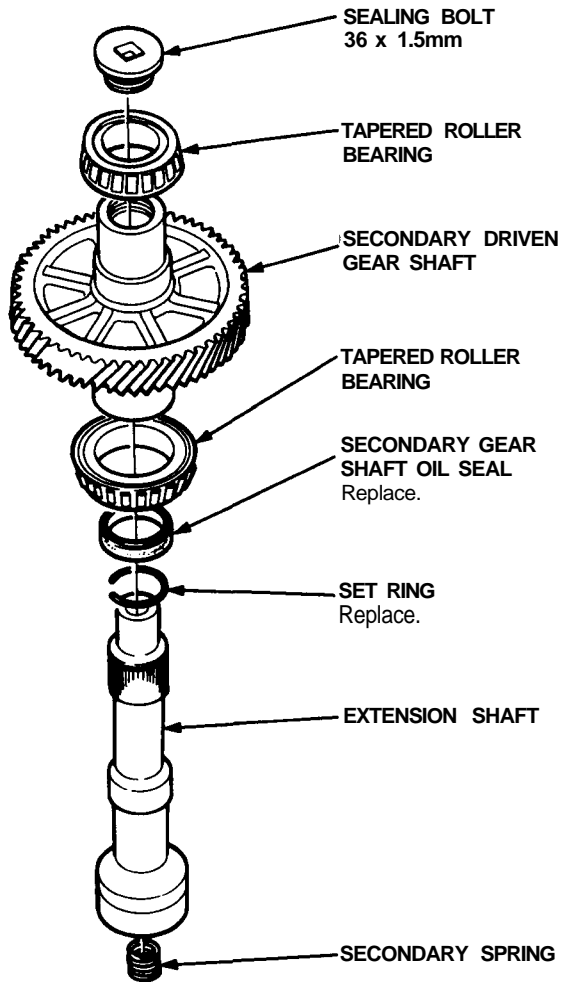


1. Remove the set ring.
2. Remove the extension shaft from the secondary driven gear shaft.

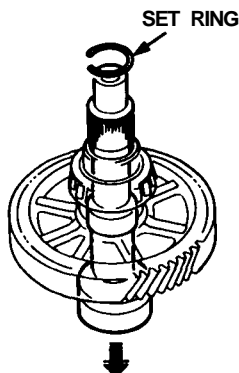

Secondary Driven Gear Shaft Oil Seal

Replacement

1. Remove the oil seal from the secondary driven gear shaft.

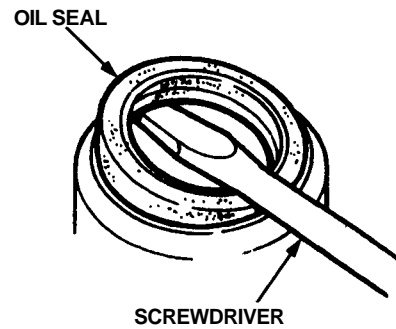

2. Drive the oil seal into the secondary driven gear shaft, using the special tools as shown.

