



Oil Seal

Removal

1. Remove the oil seal from the transmission housing.

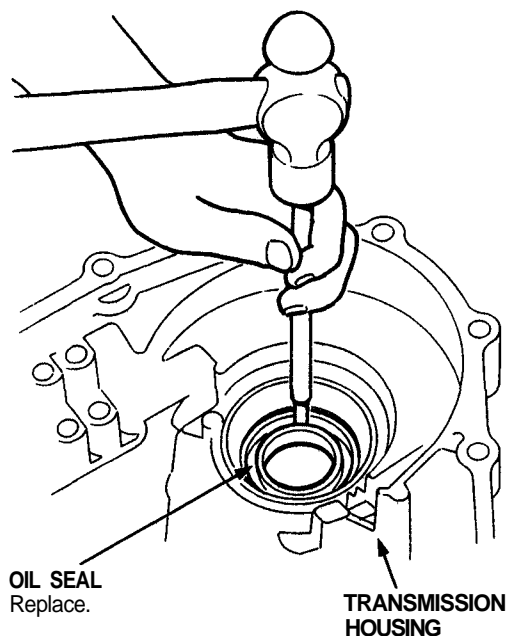

2. Remove the oil seal from the torque converter housing.

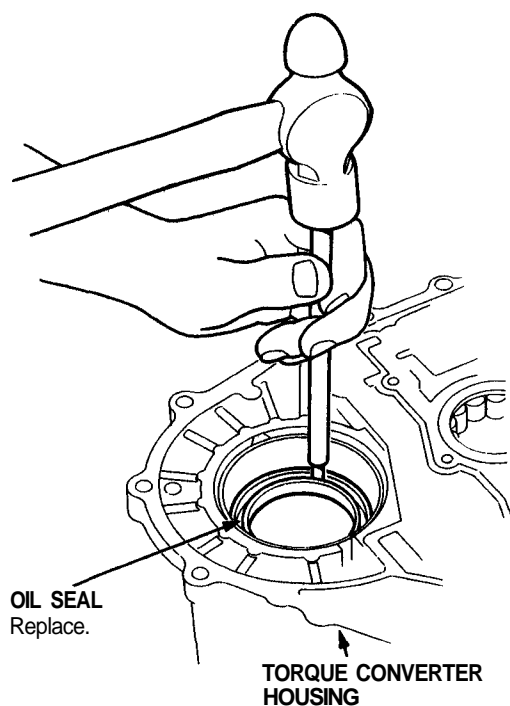

Bearing Outer Race

Replacement

NOTE:

- The bearing and outer race should be replaced as a set.
- If the bearings and/or thrust washer(s) are replaced, inspect and adjust the bearing preload (see page [14-142](#)).

1. Remove the bearing outer race by heating the housings to 212°F (100°C) with a heat gun, then tap the housing until the bearing outer race falls out.

CAUTION: Do not heat the housings in excess of 212°F (100°C).

