



Oil Seal

Removal

1. Remove the oil seal from the transmission housing.

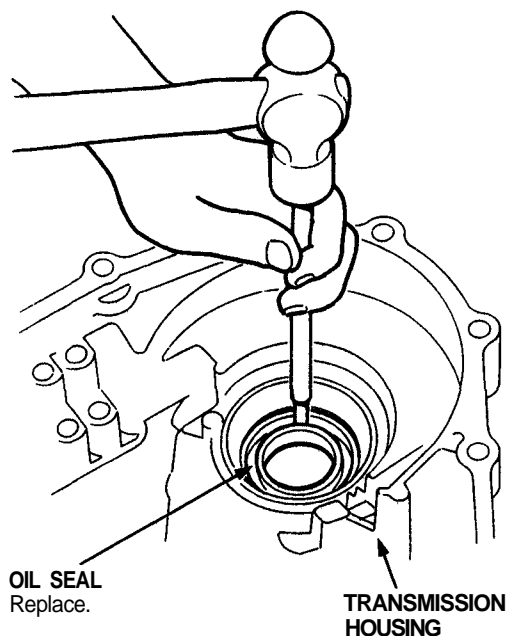

2. Remove the oil seal from the torque converter housing.

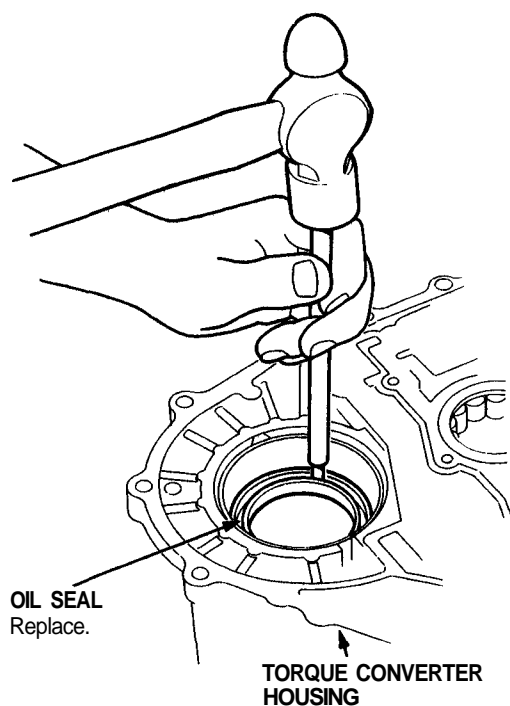

Bearing Outer Race


Replacement

NOTE:

- The bearing and outer race should be replaced as a set.
- If the bearings and/or thrust washer(s) are replaced, inspect and adjust the bearing preload (see page [14-142](#)).



1. Remove the bearing outer race by heating the housings to 212°F (100°C) with a heat gun, then tap the housing until the bearing outer race falls out.

CAUTION: Do not heat the housings in excess of 212°F (100°C).

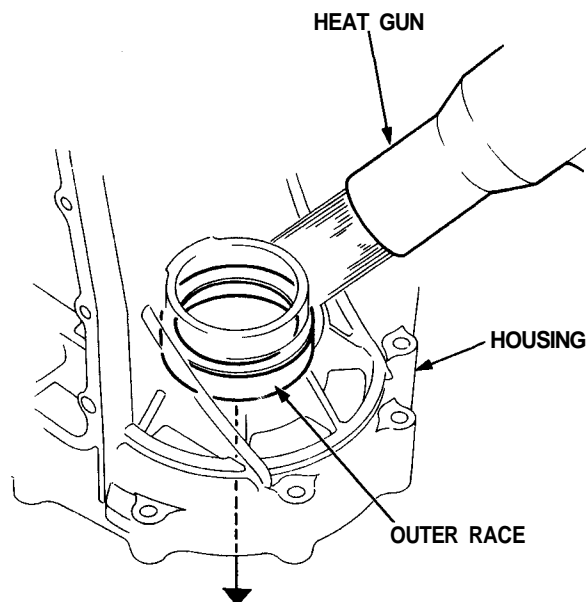



2. Install the thrust washer and bearing outer race.
3. Drive the outer race into the transmission housing, using the special tools as shown.

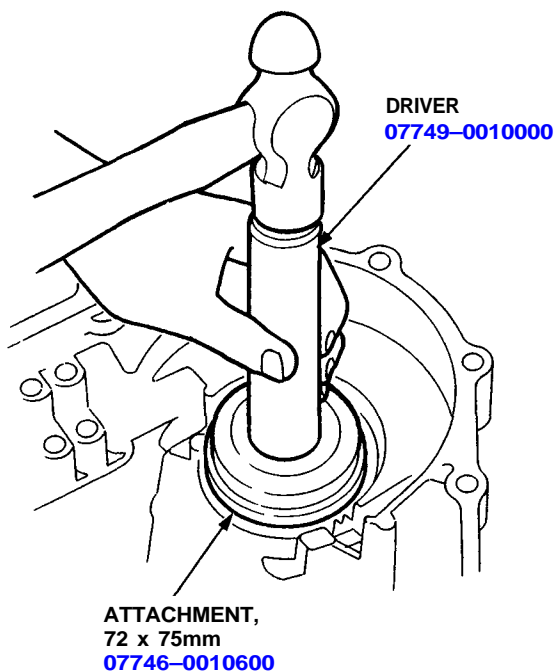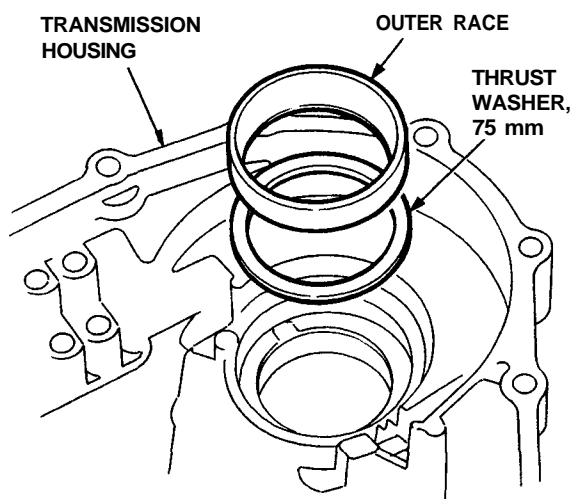

4. Install the washer and bearing outer race.
5. Drive the outer race into the torque converter housing, using the special tools as shown.

