





# Torque Converter Housing Bearings

## Mainshaft Bearing/Oil Seal Replacement

1. Drive out the mainshaft bearing and oil seal using the special tools as shown.

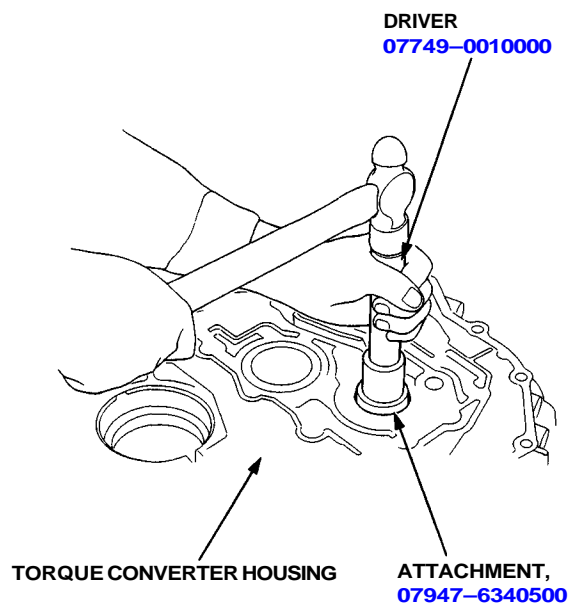

2. Drive in the new mainshaft bearing until it bottoms in the housing, using the special tools as shown.

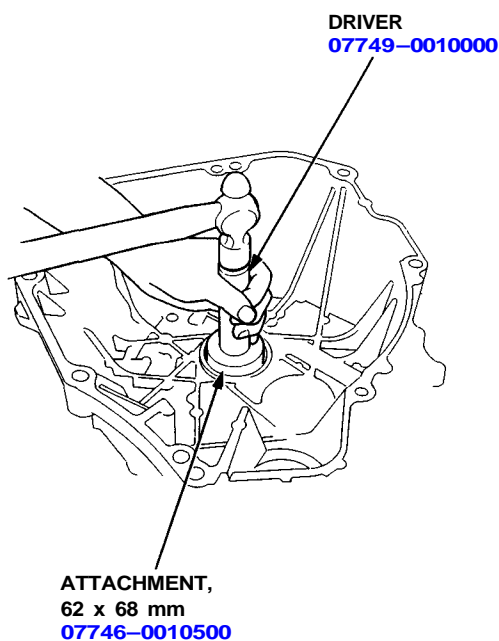

3. Install the new oil seal flush with the housing using the special tools as shown.

