


Shift Lever Assembly

Inspection/Adjustment

SRS wire harness is routed near the shift lever.

CAUTION:


- All SRS wiring harnesses are covered with yellow outer insulation.
- Before disconnecting any part of the SRS wire harness, install the short connectors (see [section 23](#)).
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.

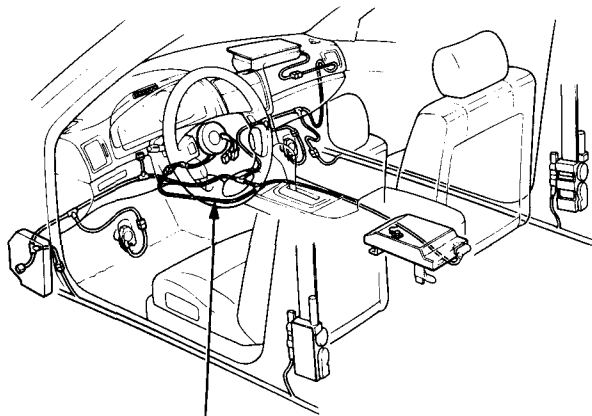

SRS MAIN HARNESS


NOTE: Inspect the detent spring adjustment when replacing the shift lever.

1. Install the shift lever assembly onto the selector lever bracket.
2. Verify the gearshift selector movement.

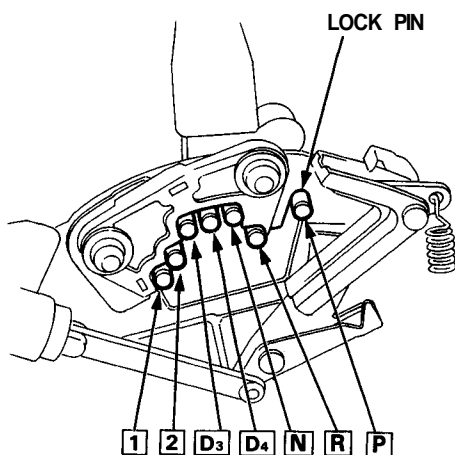


3. Move the shift lever to **N** position.
4. Measure the clearance between the lock pin and lock pin gate as shown.

Specification: 0.2–0.5 mm (0.008–0.020 in)

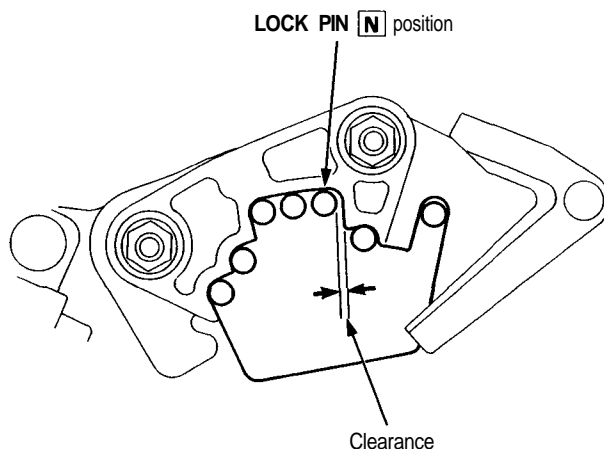

5. If the clearance is out of specification, loosen the bolt B and adjust.

BOLT B
5 x 0.8 mm
3 N-m (0.3 kg-m,
2 lb ft)

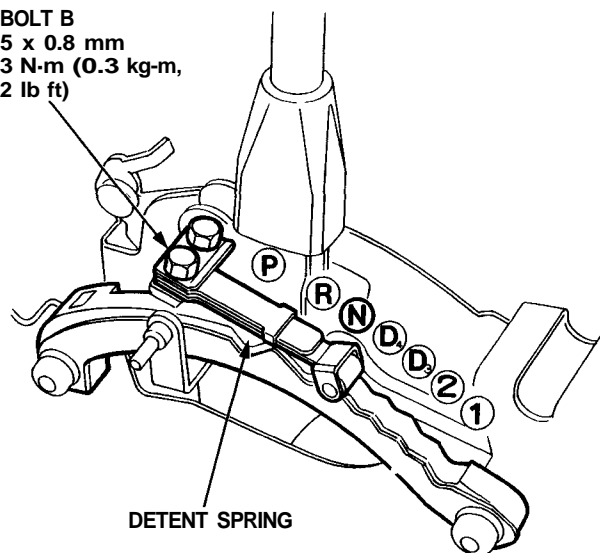

NOTE: Verify the shift lever movement after adjusting.