




# A/T Gear Position Indicator Panel

## Adjustment

SRS wire harness is routed near the shift lever.

### CAUTION:

- All SRS wiring harnesses are covered with yellow outer insulation.
- Before disconnecting any part of the SRS wire harness, install the short connectors (see [section 23](#)).
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.

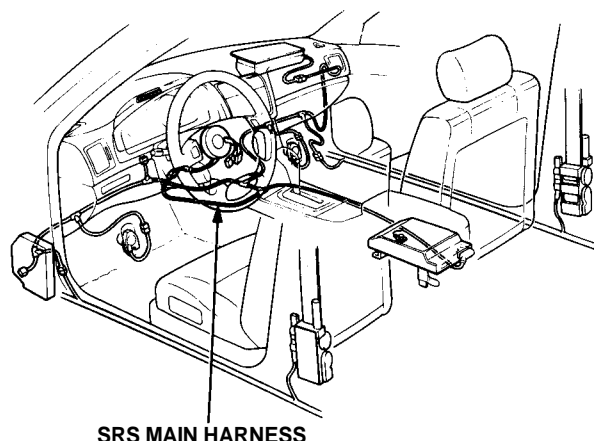

1. Check that the index mark of the indicator aligns with the N mark of the A/T gear position indicator panel with the transmission in **N** position.
2. If not aligned, remove the center console panel (see [section 20](#)).
3. Remove the A/T gear position indicator panel mounting screws and adjust by moving the panel.

NOTE: Whenever the A/T gear position indicator panel is removed, reinstall the panel as described above.

