


# Differential Carrier

## Tapered Roller Bearing Replacement

1. Remove the tapered roller bearings using the bearing separator and a press as shown.

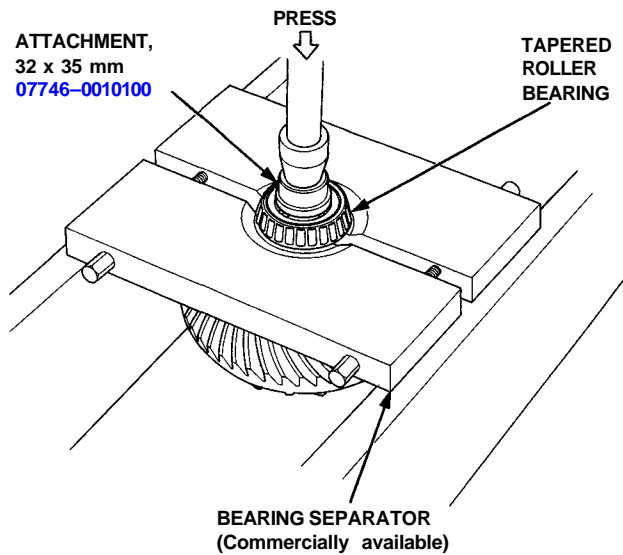

2. Install the both tapered roller bearings using the special tool and a press as shown.

