



# Component Location

## Index

### NOTE:

- If an intact driver's airbag assembly has been removed from a scrapped car or has been found defective or damaged during transit, storage or service, it should be deployed (see [section 23](#)).
- Before removing the gearbox, remove the ignition key to lock the steering shaft from turning.
- After installing the gearbox, check the wheel alignment, and adjust if necessary.

