


Disassembly

1. Remove the tension pins by pushing the retainer spring and turning them.
2. Disconnect and remove the upper return springs.


NOTE: Remove the rear hub unit (see page 19-21) when removing the shoes.

⚠ WARNING

Do not use an air hose to blow the brake assembly clean. To avoid breathing lining dust, use an OSHA-approved vacuum cleaner.

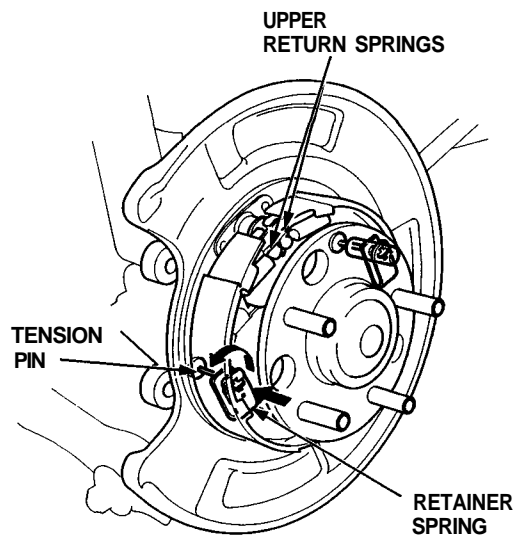

3. Lower the parking brake shoe assembly.
4. Disconnect the parking brake cable from the parking brake lever.

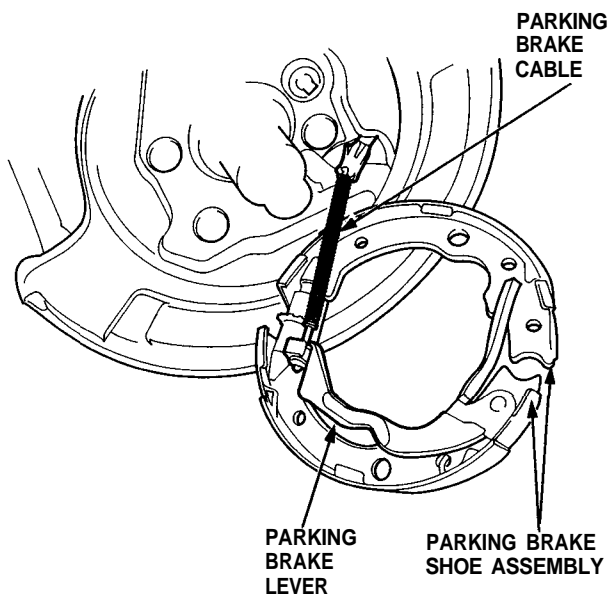

5. Separate the brake shoes by removing adjuster and springs.
6. Remove the wave washer, parking brake lever and pivot pin from the brake shoe by removing the U-clip.

