

Parking Brake Cable

Disassembly/Reassembly

CAUTION: Block the front wheels before jacking up the rear of the car.

NOTE:

- Remove the parking brake cable from the backing plate using a 12 mm box offset wrench as shown.
- SRS components are located near the parking brake lever.

CAUTION:

- All SRS wiring harnesses are covered with yellow outer insulation.
- Before disconnecting any part of the SRS wire harness, install the short connectors (see page [23-371](#)).
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.
- The parking brake cables must not be bent or distorted. This will lead to stiff operation and premature cable failure.

