



Diagnostic Trouble Code (DTC) 1-4: Pressure Switch Circuit

CAUTION: Use only the digital multimeter to check the system.

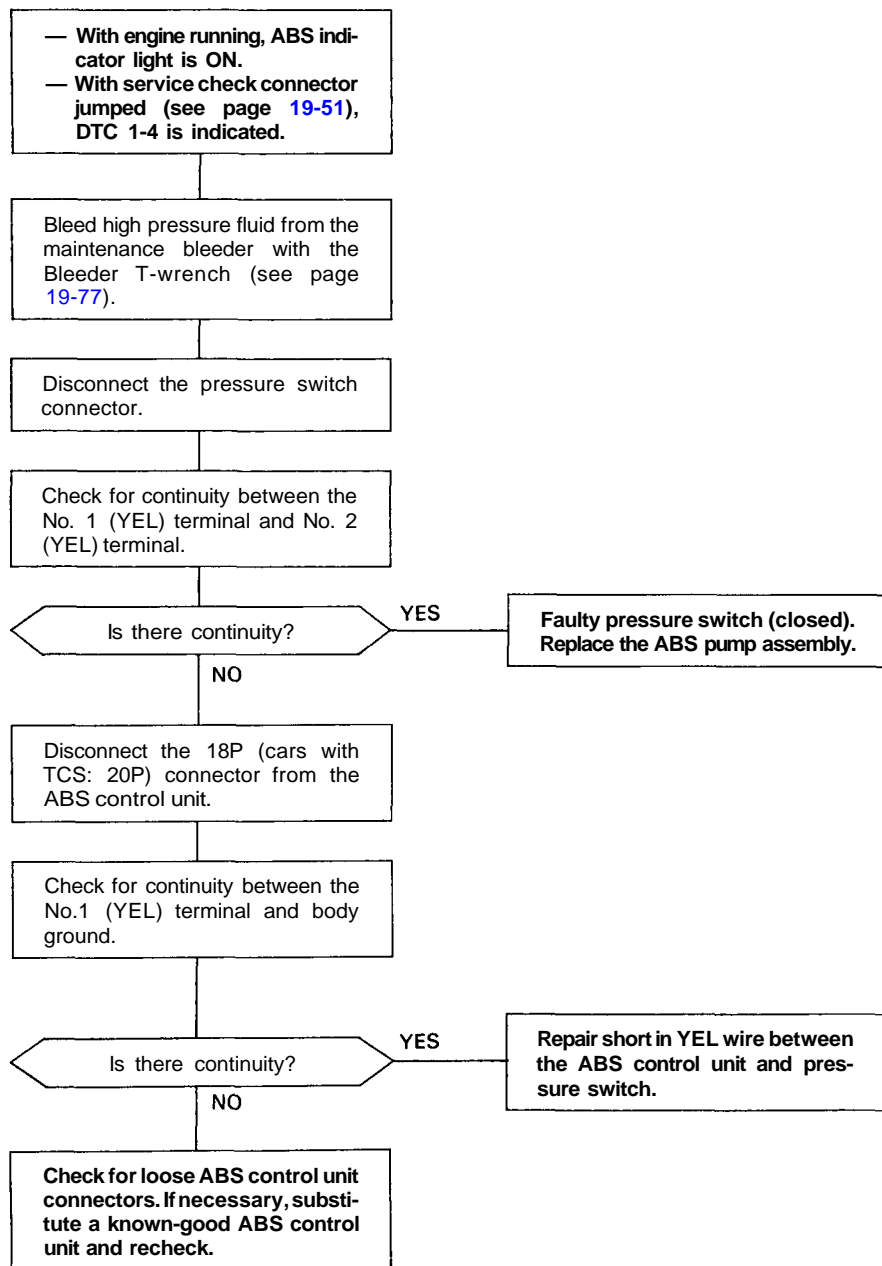


PRESSURE SWITCH CONNECTOR

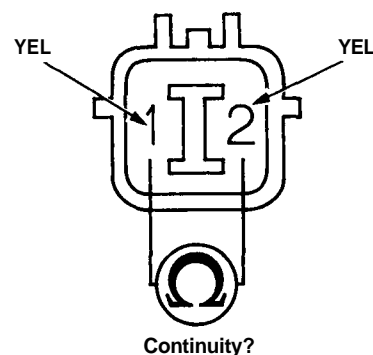

View from terminal side.

PRESSURE SWITCH CONNECTOR

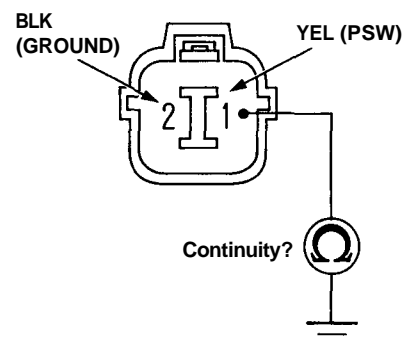

View from terminal side.

(cont'd)