


Diagnostic Trouble Codes (DTCs) 5 to 5-8: Wheel Sensor(s)



CAUTION: Use only the digital multimeter to check the system.

NOTE: If a malfunction is detected, this code appears and the fail-safe function is activated. The ABS indicator light comes ON after restarting the engine until the DTC is erased (by disconnecting the ABS B2 (15 A) fuse in the under-hood fuse/relay box for three seconds).

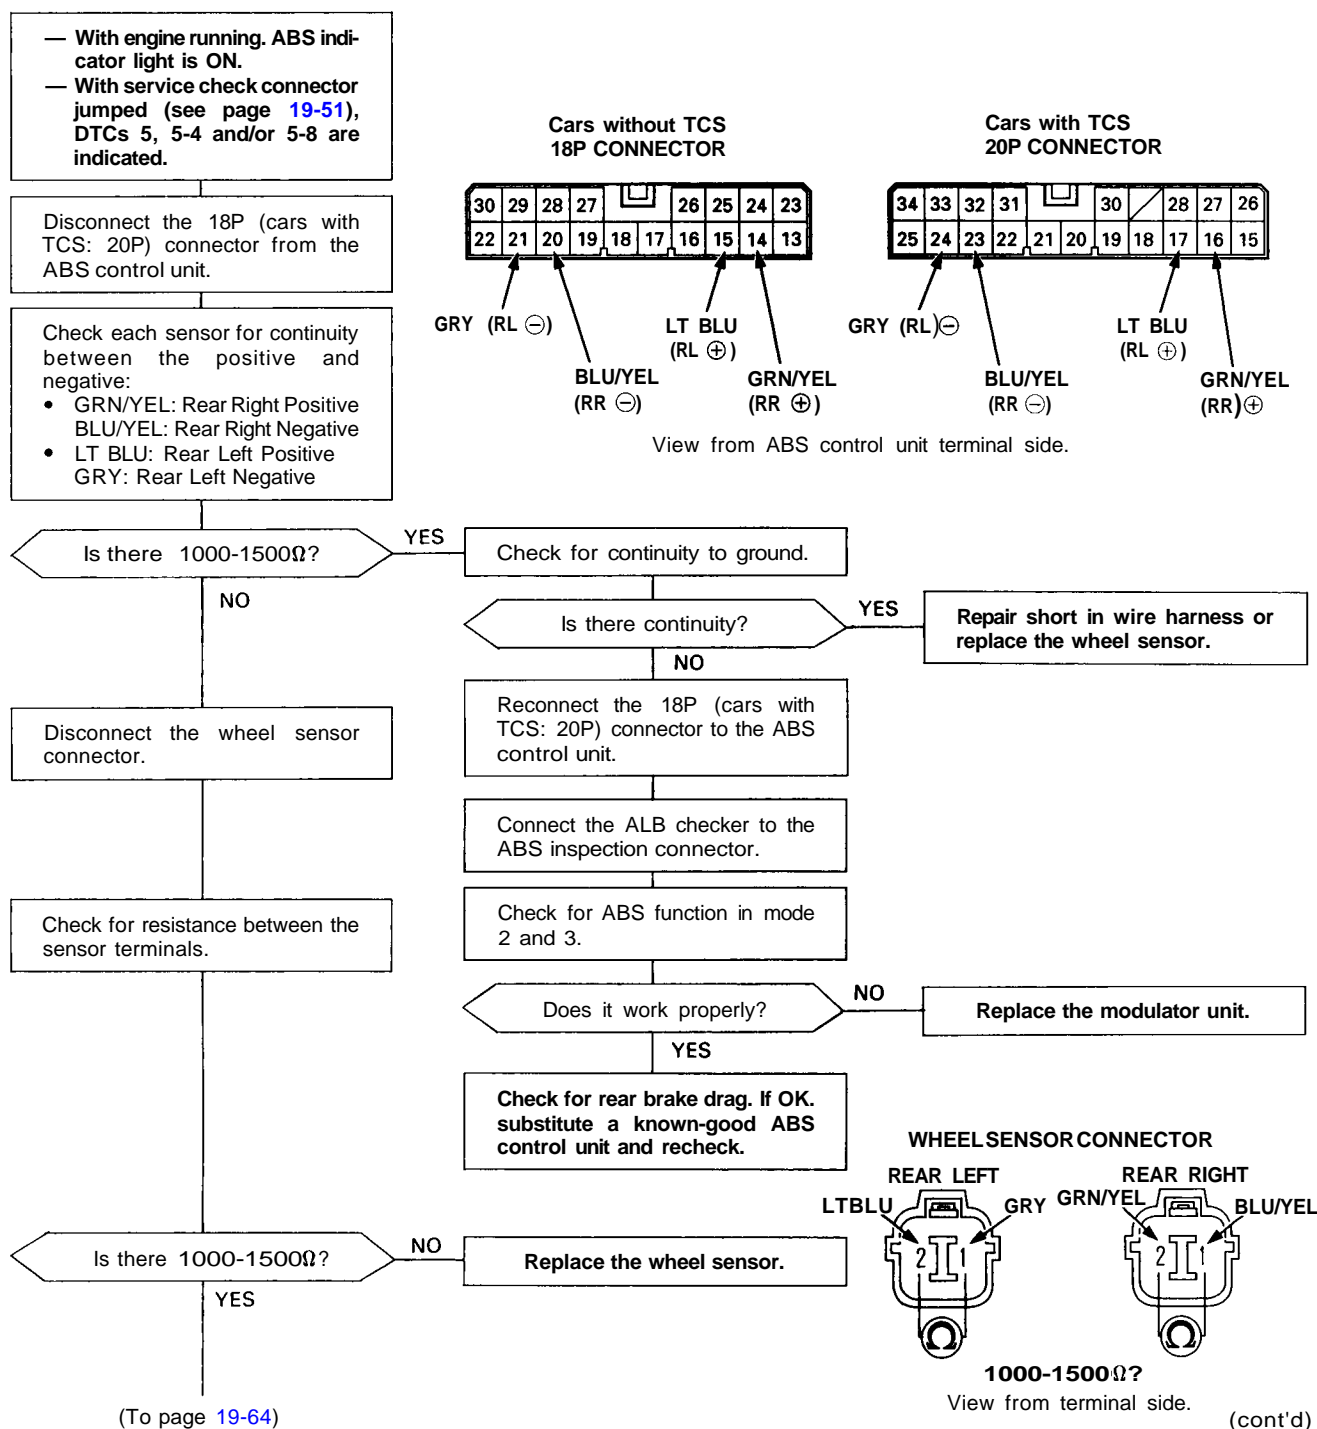

Troubleshooting

Flowcharts (cont'd)

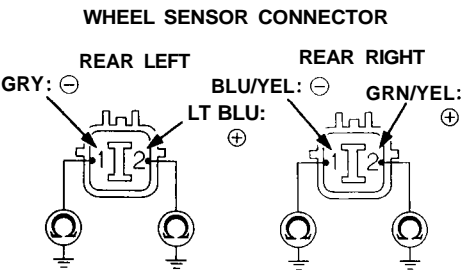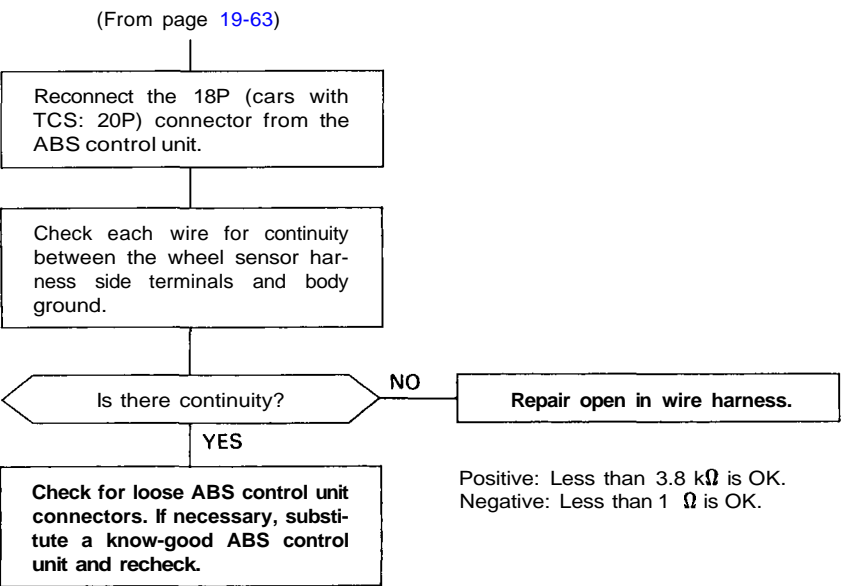

Continuity?

View from terminal side.

Positive: Less than 3.8 kΩ is OK.
Negative: Less than 1 Ω is OK.