


# Pulsers/Wheel Sensors

## Wheel Sensor Replacement

### Front:

#### NOTE:

- Be careful when installing the sensors to avoid twisting the wires.
- After sensor replacement, confirm proper operation (see page 19-49).

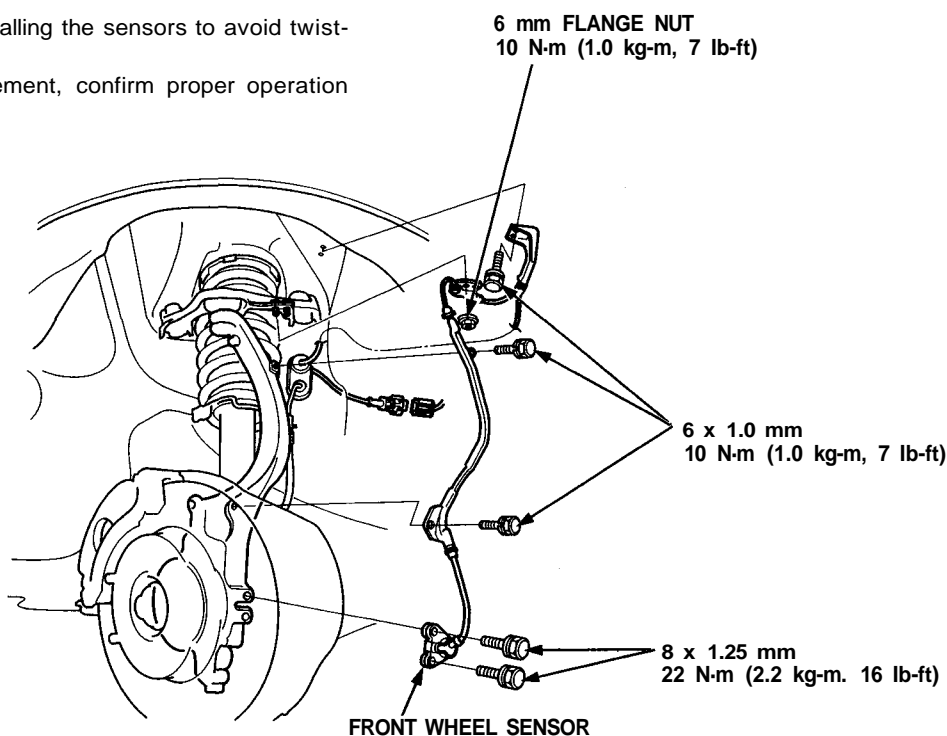

### Rear:

#### NOTE:

- Be careful when installing the sensors to avoid twisting the wires.
- After sensor replacement, confirm proper operation (see page 19-49).

