

Troubleshooting

TCS Switch and Activation Lights Do Not Go Off

The TCS switch indicator light and the TCS activation light do not go off two seconds after the ignition switch is turned on.

Turn the ignition switch OFF.

Disconnect the 26P connector from the TCS control unit.

Turn the ignition switch ON.

Do the lights go off?

NO

Repair short in the RED/GRN wire between the TCS control unit and gauge assembly, and in the GRY/RED wire between the TCS control unit and TCS switch.

YES

Substitute a known-good TCS control unit and recheck.

GRY/RED WIRE
(From TCS SWITCH INDICATOR LIGHT)

RED/GRN WIRE
(From TCS ACTIVATION LIGHT)

1A	2A	3A	4A	5A	6A		8A	9A	10A		12A	13A
14A		16A	17A	18A	19A	20A		22A	23A	24A	25A	26A

View from terminal side

TCS CONTROL UNIT
26P CONNECTOR
(HARNESS SIDE)