




All Wheel Sensors

Diagnostic Trouble Code (DTC) 4-9: All wheel sensors

NOTE: The TCS indicator light comes on if all wheel speed signals from the ABS control unit stop for more than five seconds while the engine is running.

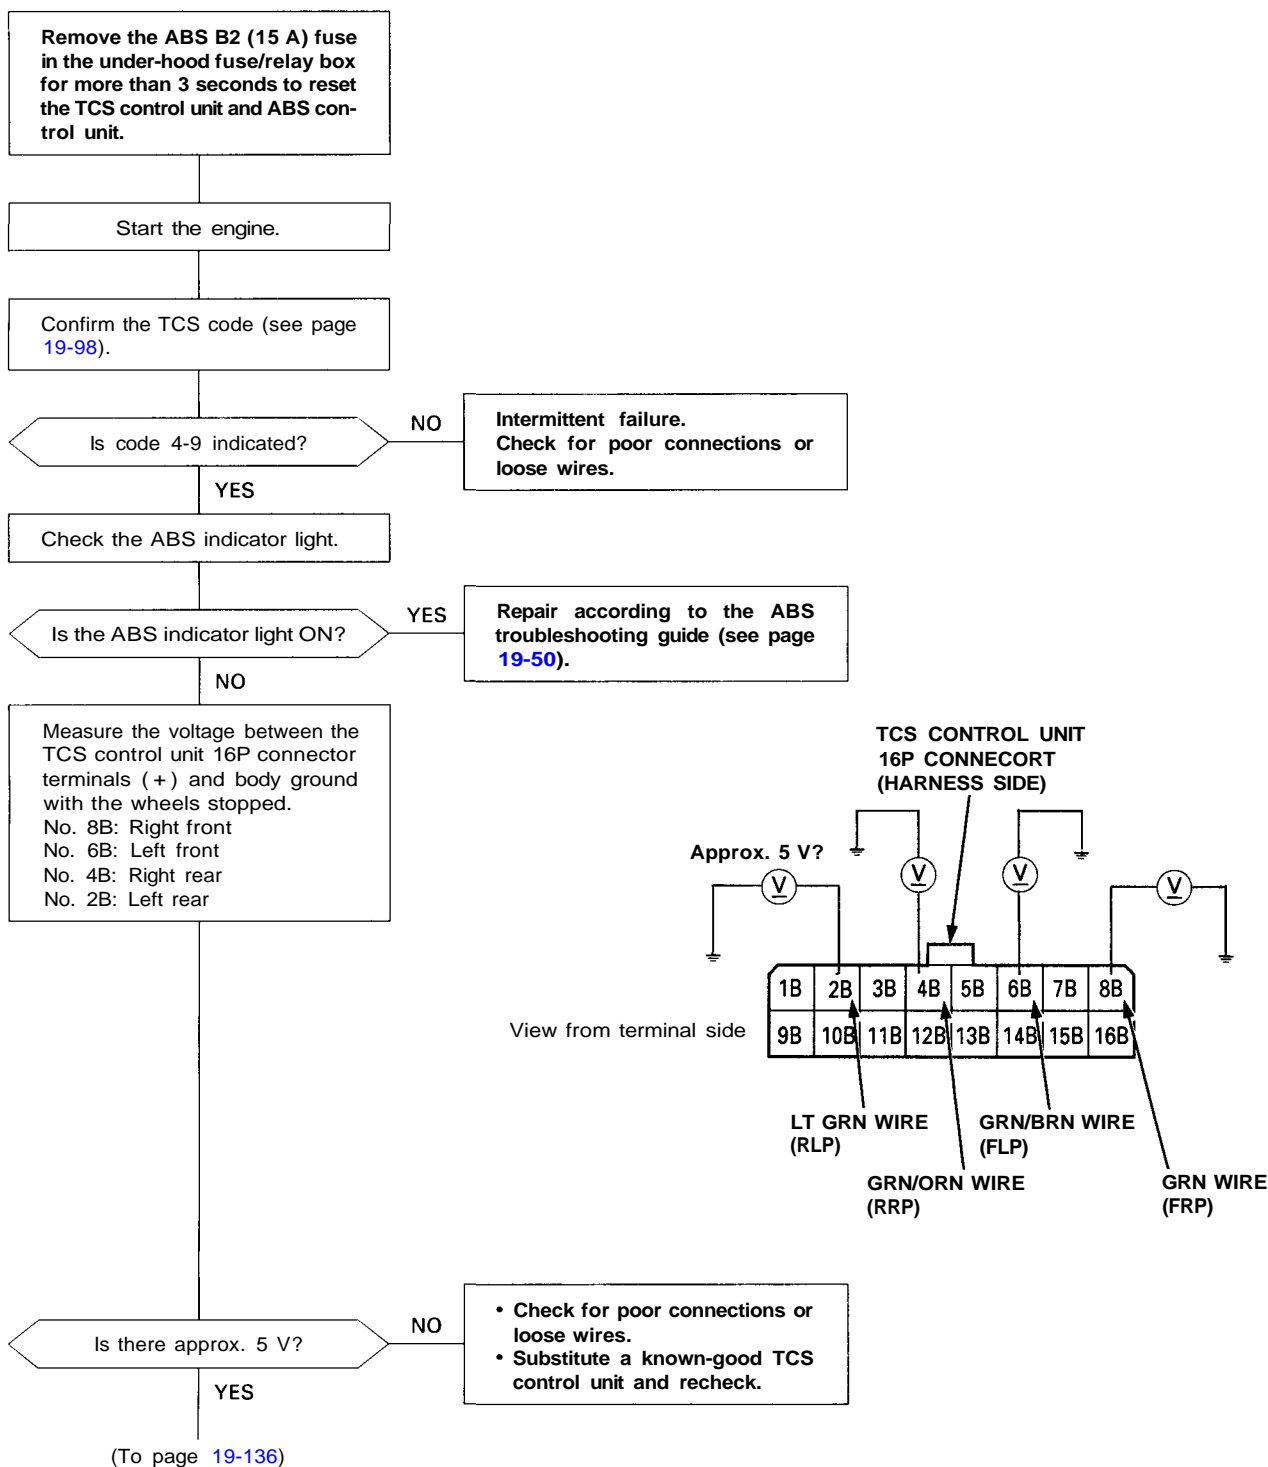

(cont'd)


Troubleshooting

All Wheel Sensors (cont'd)

(From page 19-135)

Measure the voltage between the ABS control unit 14P connector terminals (+) and body ground with the wheels stopped.

No. 6: Right front
No. 5: Left front
No. 13: Right rear
No. 14: Left rear

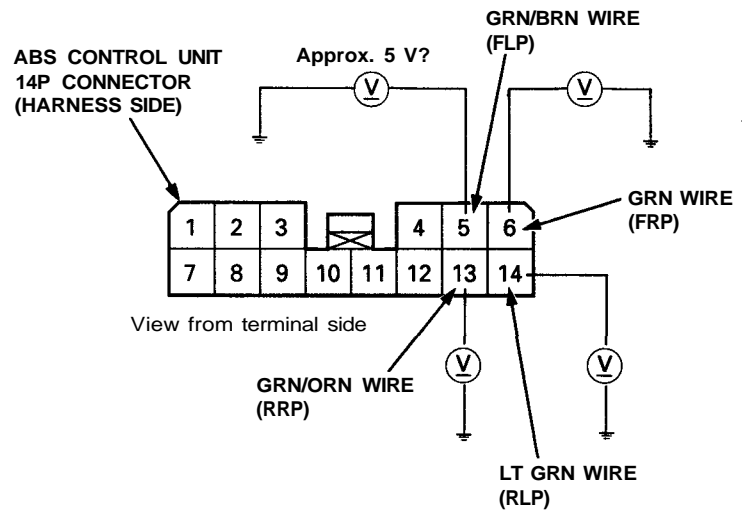

Is there approx. 5 V?

NO

Repair open in wire between the TCS control unit and ABS control unit:
GRN: Right front
GRN/BRN: Left front
GRN/ORN: Right rear
LT GRN: Left rear

YES

- Check for poor connections or loose wires.
- Substitute a known-good ABS control unit and recheck.