

Doors


Outer Handle Replacement

NOTE: Raise the glass fully.

1. Remove:
 - Door panel (see page 20-4)
 - Plastic cover (see page 20-5)
2. Pry the outer handle rod and cylinder rod out of its joint using a flat tip screwdriver. Disconnect the connector and clips. Remove the access hole seal and mounting bolts, then remove the outer handle.

NOTE:

- Use protective tape on the door.
- To ease reassembly, note the location (A) of the outer handle rod on the joint before disconnecting it.

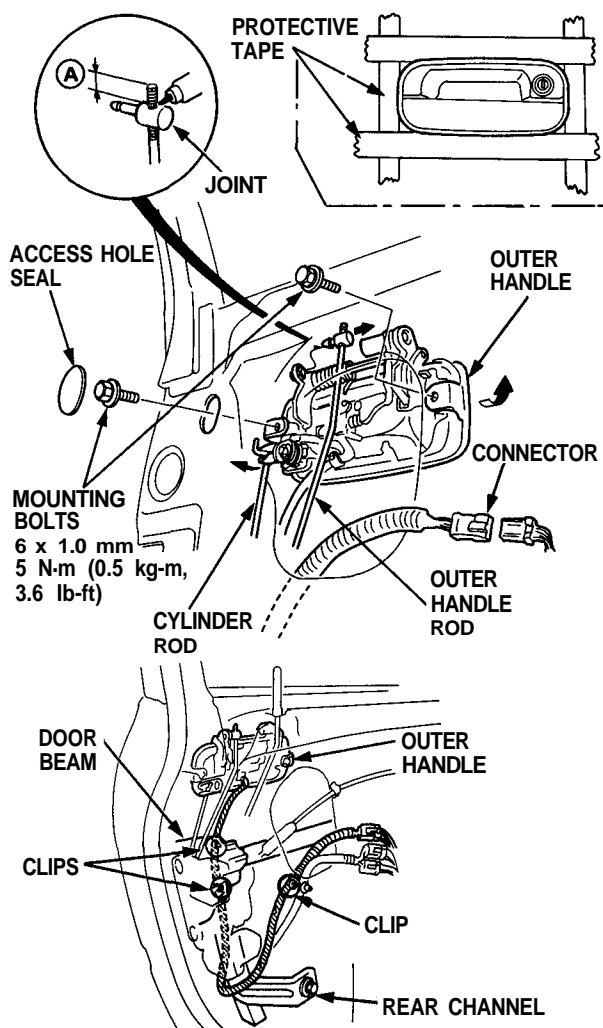

3. Installation is the reverse of the removal procedure.

NOTE: Make sure the wire harness is routed and fastened properly.


Latch Replacement

NOTE: Raise the glass fully.

1. Remove:
 - Door panel (see page 20-4)
 - Plastic cover (see page 20-5)
 - Rear channel (see page 20-7)
2. Pry the outer handle rod and cylinder rod out of its joint using a flat tip screwdriver. Disconnect the connectors and detach them from the door. Remove the mounting screws and nut, then remove the latch through the hole in the door.

NOTE:

- Take care not to bend the inner handle cable.
- To ease reassembly, note the location (A) of the outer handle rod on the joint before disconnecting it.

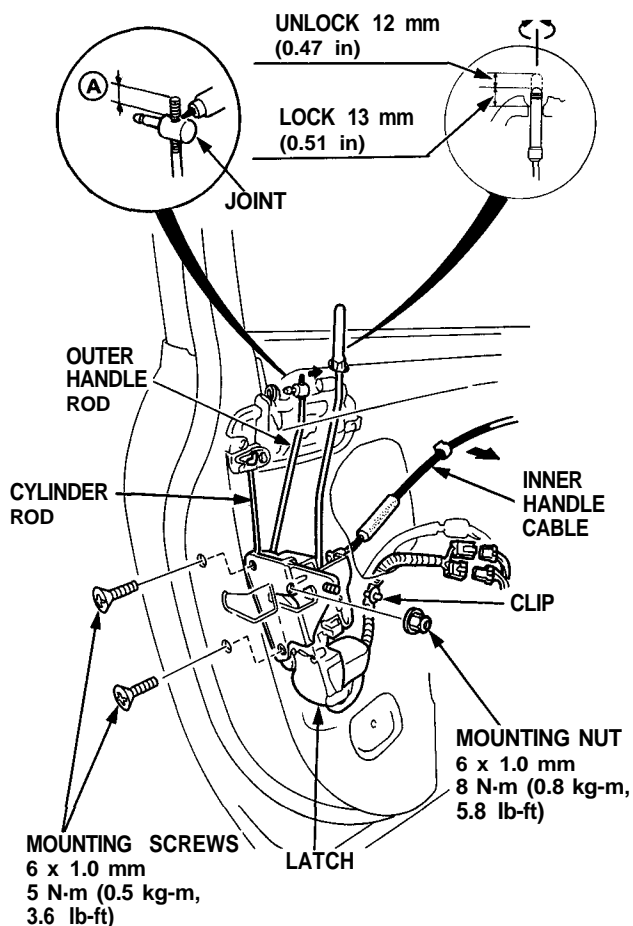

3. Installation is the reverse of the removal procedure.