

Doors


Inner Trim Replacement

NOTE: Lower the glass fully.


1. Remove the door panel (see page 20-4).
2. Remove the front inner trim first, then remove the rear inner trim.

NOTE:

- Take care not to scratch the front and rear inner trims.
- Remove the inside clips from inner weatherstrip side.

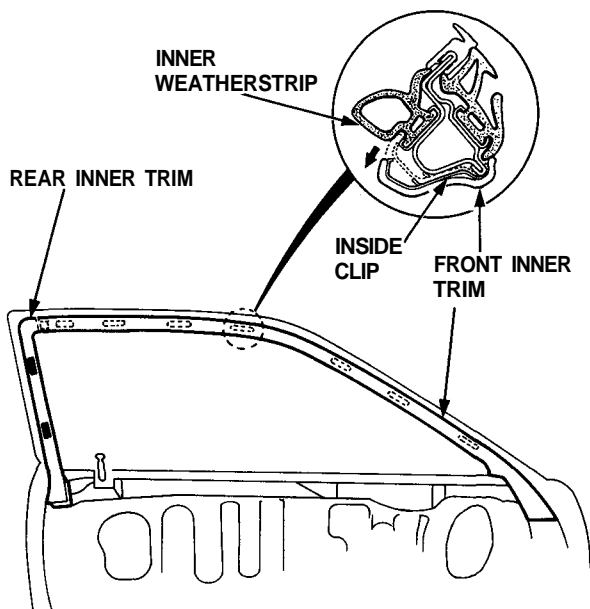

■ : Clip locations ,2 □ : Clip locations ,7

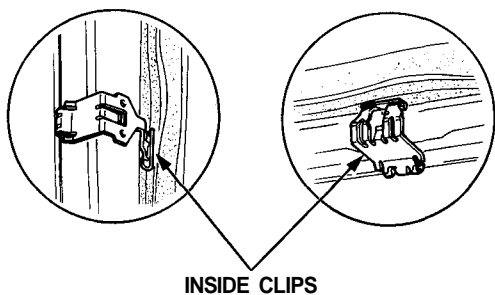


3. Installation is the reverse of the removal procedure.

Weatherstrip Replacement

• : Clip locations

Clip A: ,21

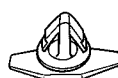


Clip B: ,3



Plug C: ,2




Rust-prevention
treatment
maintenance
plug

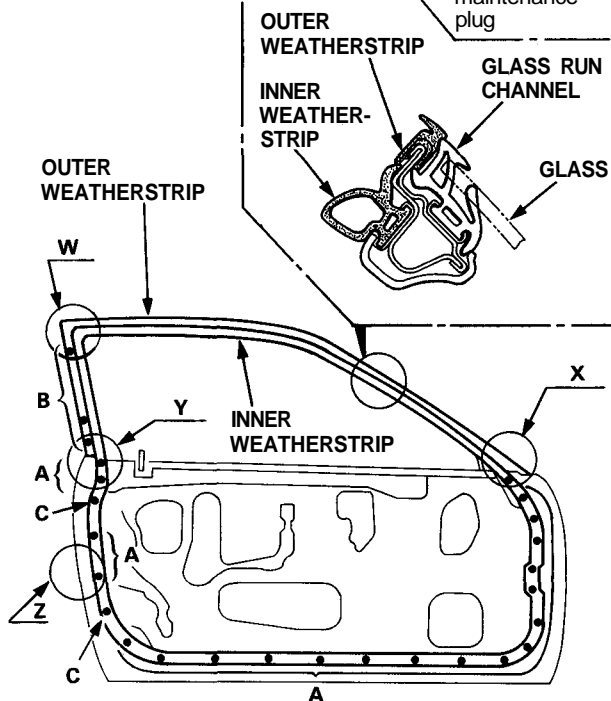


*1: 40 mm (1.57 in)

*2: 60 mm (2.36 in)


Sealant: Cemedine #8500

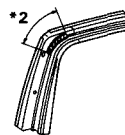


VIEW W

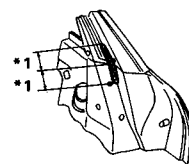

VIEW X

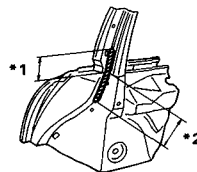

VIEW Y

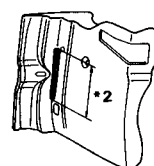

VIEW Z

NOTE:

- Before installing the inner weatherstrip, apply clear sealant to the shadowed areas of the door as shown.
- If necessary, replace any damaged clips.