


Quarter Glass

Quarter Trim Panel/Plastic Cover Replacement


NOTE: Remove the rear seat (see page 20-66).

1. Peel the rear pillar trim panel and remove the door trim (see page 20-43 ('91-'92)('93-'95))
2. Remove the ashtray. Remove the screws and clips (see trim pad remover, page 20-4) attaching the quarter trim panel. Remove the quarter trim panel by pulling it upward. Disconnect the power window switch connector and remove the front seat belt from the seat belt guide.


⊙ : Clip locations ,4

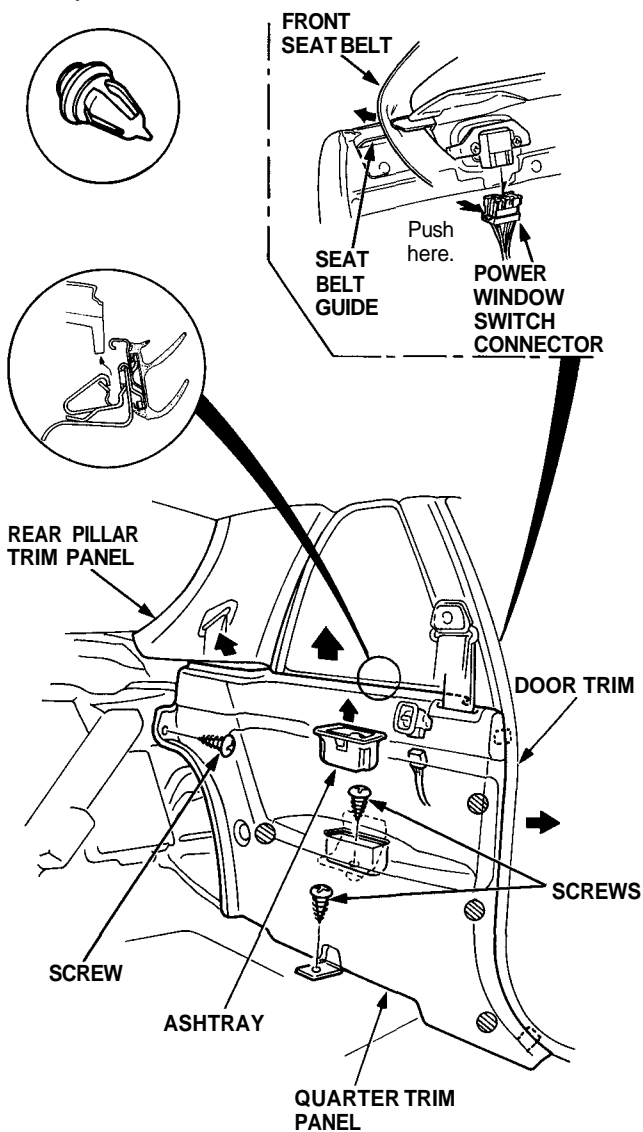

3. If necessary, remove the armrest, seat belt guide and power window switch from the quarter trim panel.

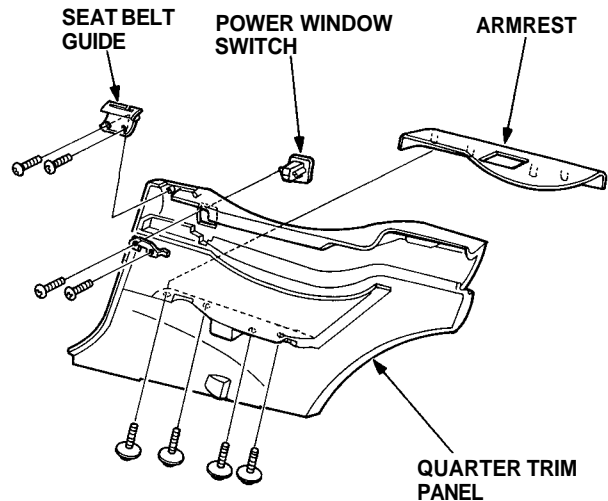

4. Remove the grommet and bracket. Disconnect the connectors and clip. Carefully remove the plastic cover.

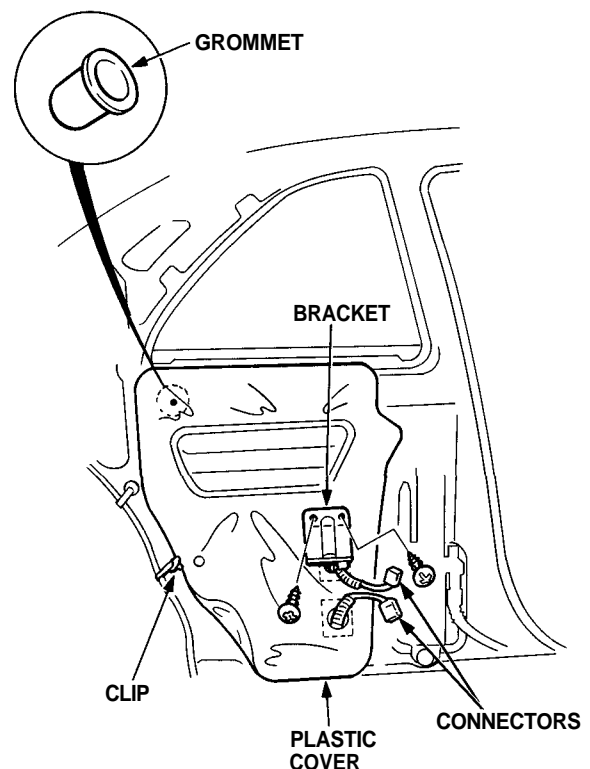




5. Installation is the reverse of the removal procedure.

NOTE:

- Make sure the wire harnesses, connectors and clips are fastened correctly on the body.
- Before tightening the screws, make sure the wire harnesses are not pinched.

● : Clip locations ,4

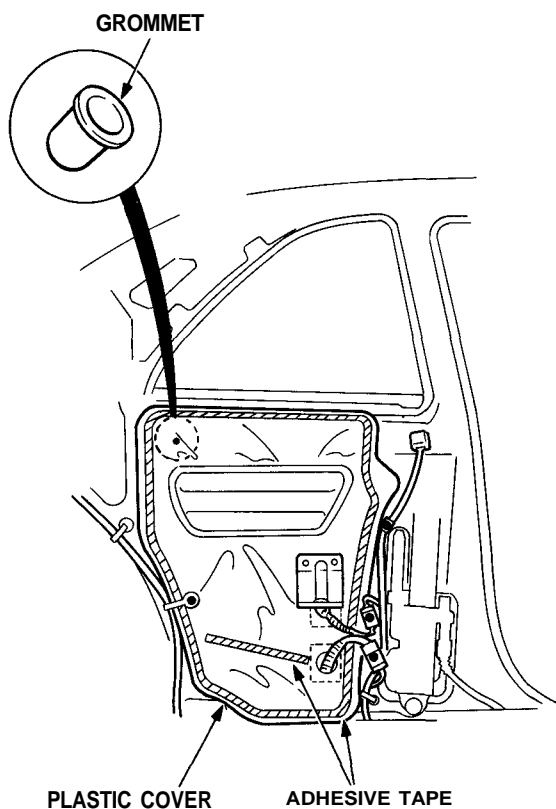

Glass/Regulator Replacement

NOTE: Lower the glass fully.

1. Remove:


- Quarter trim panel (see page 20-16)
- Plastic cover (see page 20-16)
- Inner molding (see page 20-19)
- Quarter molding and glass run channel (see page 20-19)

2. Carefully raise the glass until you can see the glass mounting bolts.

Remove and loosen the mounting bolts.

3. Carefully pull the glass out through the window slot.

NOTE: Take care not to drop the glass inside the body.

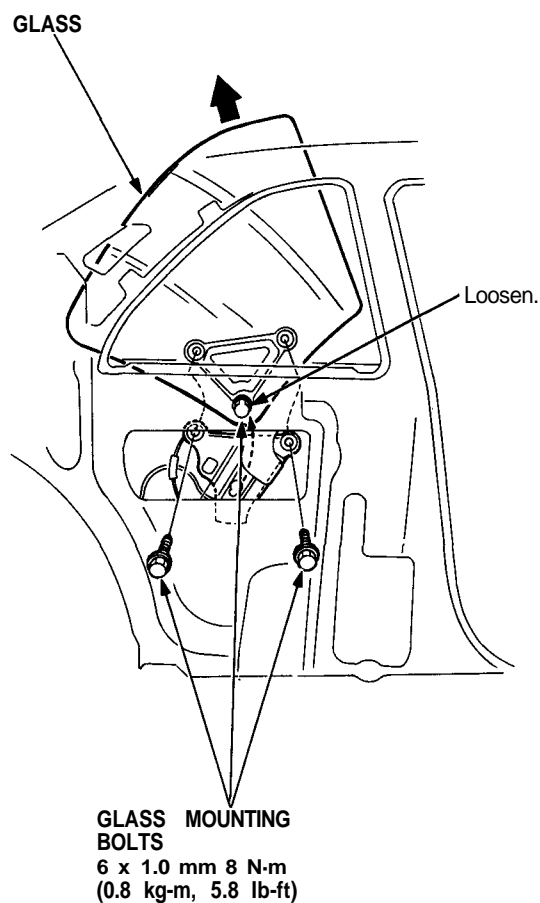

(cont'd)