




5. Installation is the reverse of the removal procedure.

NOTE:

- Make sure the wire harnesses, connectors and clips are fastened correctly on the body.
- Before tightening the screws, make sure the wire harnesses are not pinched.

● : Clip locations ,4

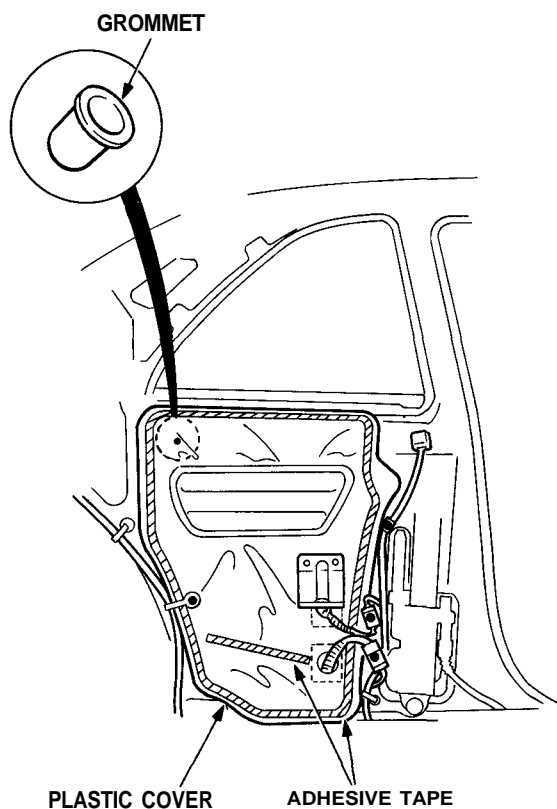


Glass/Regulator Replacement

NOTE: Lower the glass fully.

1. Remove:
 - Quarter trim panel (see page 20-16)
 - Plastic cover (see page 20-16)
 - Inner molding (see page 20-19)
 - Quarter molding and glass run channel (see page 20-19)

2. Carefully raise the glass until you can see the glass mounting bolts. Remove and loosen the mounting bolts.
3. Carefully pull the glass out through the window slot.

NOTE: Take care not to drop the glass inside the body.

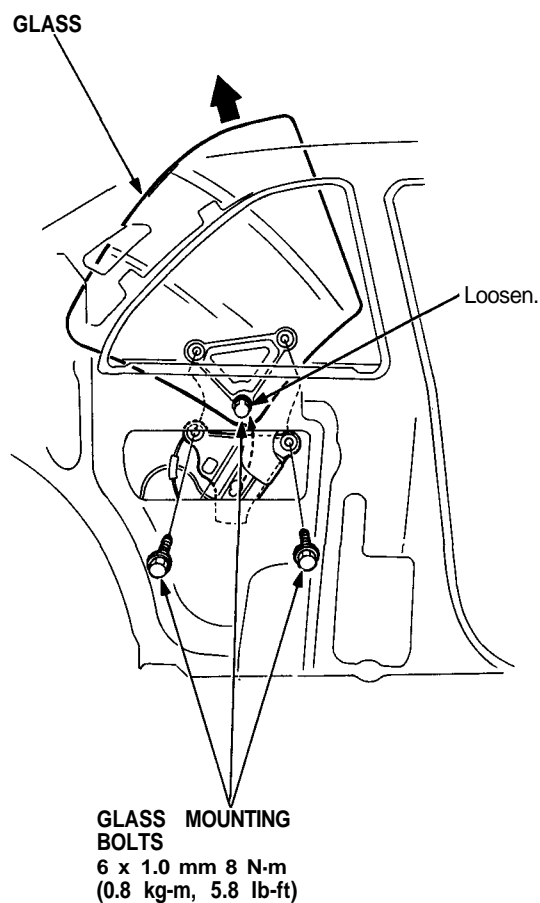

(cont'd)


Quarter Glass

Regulator Replacement (cont'd)


4. Remove the three locknuts and loosen the three motor bolts.
Disconnect the connector. Take out the regulator through the center hole in the body.

NOTE:

- Scribe a line around the locknuts to show the original adjustment.
- Hold the adjusting bolts with a hex wrench when removing the locknuts.

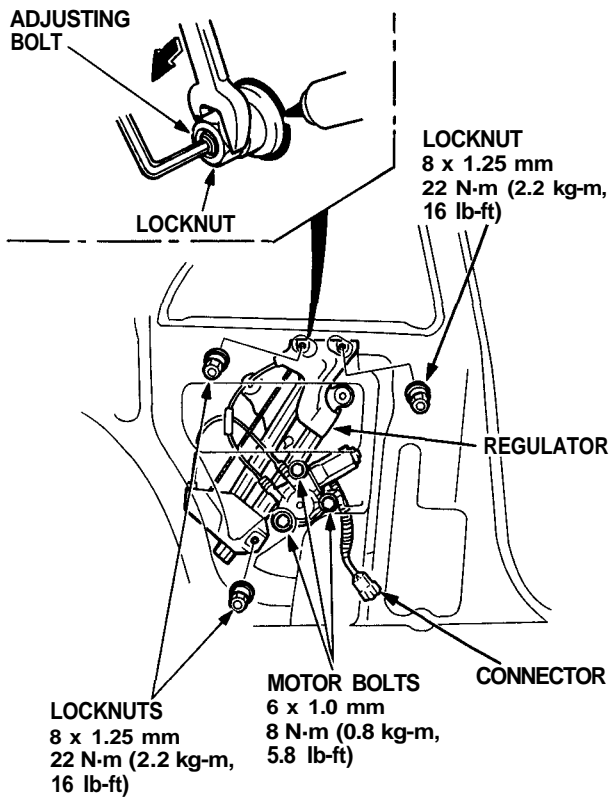

5. Grease the sliding surfaces of the regulator where shown.

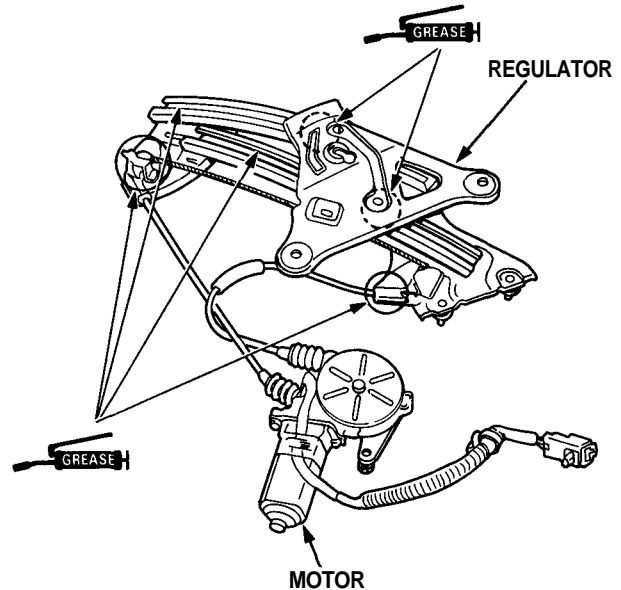

6. Installation is the reverse of the removal procedure.
7. Roll the glass up and down to see if it moves freely without binding. Also make sure that there is no clearance between the glass and glass run channel when the glass is closed. Adjust the position of the glass as necessary (see page 20-20).
8. Attach the wire harness on the body correctly (see page 20-17).