




Inner Molding Replacement

CAUTION: Wear gloves to remove and install the inner molding.

NOTE:


- Lower the glass fully.
- Take care not to twist or scratch the inner molding.

1. Remove the quarter trim panel (see page 20-16).
2. Pry the clips out using a flat tip screwdriver, then pull up the inner molding.

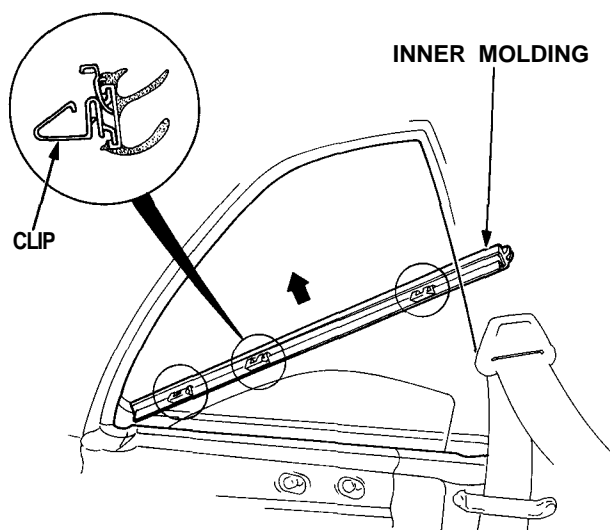

CLIP

If necessary, replace any damaged clips as shown.

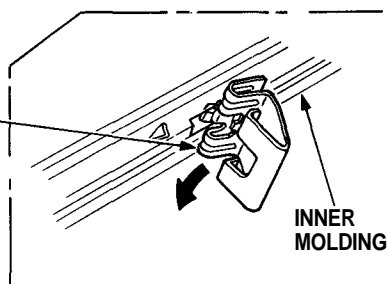

3. Installation is the reverse of the removal procedure.


Quarter Molding Replacement

CAUTION: Wear gloves to remove and install the quarter molding.

NOTE:

- Lower the glass fully.
- Take care not to scratch the quarter molding.

1. Peel the glass run channel out of the quarter molding.
2. Remove the screws, then remove the quarter molding.

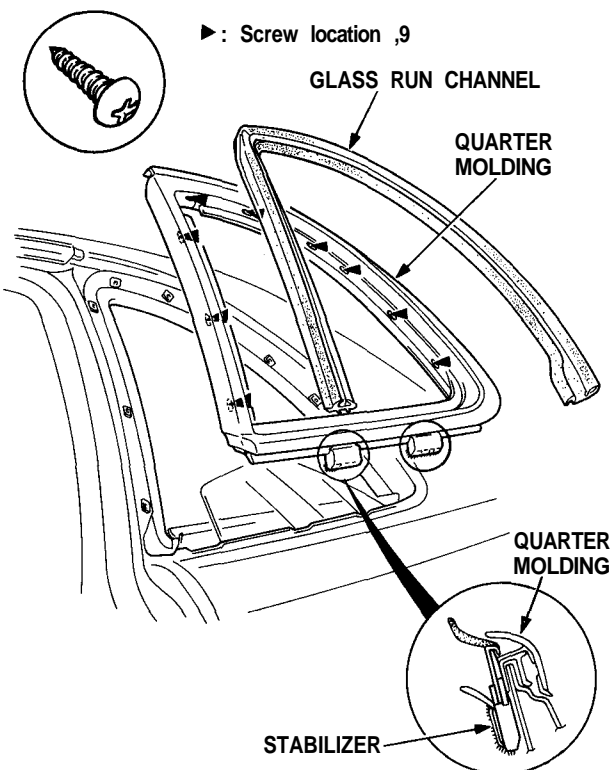

3. Installation is the reverse of the removal procedure.

NOTE: Make sure the glass run channel is fastened correctly on the quarter molding.

